



AXIOMTEK

IPS960-511-PoE

IPS962-512-PoE

Industrial and Fanless Computers

User's Manual



Disclaimers

This manual has been carefully checked and believed to contain accurate information. Axiomtek Co., Ltd. assumes no responsibility for any infringements of patents or any third party's rights, and any liability arising from such use.

Axiomtek does not warrant or assume any legal liability or responsibility for the accuracy, completeness or usefulness of any information in this document. Axiomtek does not make any commitment to update the information in this manual.

Axiomtek reserves the right to change or revise this document and/or product at any time without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Axiomtek Co., Ltd.

©Copyright 2019 Axiomtek Co., Ltd.

All Rights Reserved

June 2019, Version A3

Printed in Taiwan

Safety Precautions

Before getting started, please read the following important safety precautions.

1. The IPS960-511/IPS962-512 Series does not come equipped with an operating system. An operating system must be loaded first before installing any software into the computer.
2. Be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and place all electronic components in any static-shielded devices. Most electronic components are sensitive to static electrical charge.
3. Disconnect the power cord from the IPS960-511/IPS962-512 Series before making any installation. Be sure both the system and the external devices are turned OFF. Sudden surge of power could ruin sensitive components. Make sure the IPS960-511/IPS962-512 Series is properly grounded.
4. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
5. Turn OFF the system power before cleaning. Clean the system using a cloth only. Do not spray any liquid cleaner directly onto the screen.
6. Do not leave this equipment in an uncontrolled environment where the storage temperature is below -20°C or above 80°C. It may damage the equipment.
7. Do not open the system's back cover. If opening the cover for maintenance is a must, only a trained technician is allowed to do so. Integrated circuits on computer boards are sensitive to static electricity. To avoid damaging chips from electrostatic discharge, observe the following precautions:
 - Before handling a board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. This will help to discharge any static electricity on your body.
 - When handling boards and components, wear a grounding wrist strap, available from most electronic component stores.

Classification

1. Degree of protection against electric shock: not classified
2. Degree of protection against the ingress of water: IPX40
3. Equipment not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide.
4. Mode of operation: Continuous
5. Type of protection against electric shock: Class I equipment

General Cleaning Tips

You may need the following precautions before you begin to clean the computer. When you clean any single part or component for the computer, please read and understand the details below fully.

When you need to clean the device, please rub it with a piece of dry cloth.

1. Be cautious of the tiny removable components when you use a vacuum cleaner to absorb the dirt on the floor.
2. Turn the system off before you start to clean up the component or computer.
3. Never drop the components inside the computer or get circuit board damp or wet.
4. Be cautious of all kinds of cleaning solvents or chemicals when you use it for the sake of cleaning. Some individuals may be allergic to the ingredients.
5. Try not to put any food, drink or cigarette around the computer.

Cleaning Tools

Although many companies have created products to help improve the process of cleaning your computer and peripherals users can also use household items to clean their computers and peripherals. Below is a listing of items you may need or want to use while cleaning your computer or computer peripherals.

Keep in mind that some components in your computer may only be able to be cleaned using a product designed for cleaning that component; if this is the case it will be mentioned in the cleaning tips.

- Cloth: A piece of cloth is the best tool to use when rubbing up a component. Although paper towels or tissues can be used on most hardware as well, we still recommend using a piece of cloth whenever possible.
- Water or rubbing alcohol: You may moisten a piece of cloth a bit with some water or rubbing alcohol and rub it on the computer. Unknown solvents may be harmful to the plastics parts.
- Vacuum cleaner: Vacuuming the dust, dirt, hair, cigarette particles, and other particles out of a computer can be one of the best methods of cleaning a computer. Over time these items can restrict the airflow in a computer and cause circuitry to corrode.
- Cotton swabs: Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard-to-reach areas in your keyboard, mouse, and other locations.
- Foam swabs: Whenever possible it is better to use lint-free swabs such as foam swabs.



Note: It is strongly recommended that you should shut down the system before you start to clean any components.

Please follow the steps below:

1. Close all application programs.
2. Close operating software.
3. Turn off power switch.
4. Remove all devices.
5. Pull out the power cable.

Scrap Computer Recycling

Please inform the nearest Axiomtek distributor as soon as possible for suitable solutions in case computers require maintenance or repair; or for recycling in case computers are out of order or no longer in use.

Trademark Acknowledgments

Axiomtek is a trademark of Axiomtek Co., Ltd.

Intel[®] and Pentium[®] are registered trademarks of Intel Corporation.

Windows 10, Windows 10 IoT Enterprise, Windows 7, are trademarks of Microsoft Corporation.

Other brand names and trademarks are the properties and registered brands of their respective owners.

Table of Contents

Safety Precautions	iii
Classification.....	iv
General Cleaning Tips	iv
Cleaning Tools	v
Scrap Computer Recycling.....	vi
CHAPTER 1 INTRODUCTION	1
1.1 General Description.....	1
1.2 System Specifications	2
1.2.1 Main CPU Board.....	2
1.2.2 I/O System	3
1.2.3 System Specification.....	4
1.3 Dimensions	5
1.4 I/O Outlets	6
1.5 Packing List.....	8
1.6 Jumper Settings.....	9
1.6.1 Restore BIOS Optimal Defaults (JP1)	9
1.7 Connectors.....	10
1.7.1 MINI CARD SLOT (CN3).....	11
1.7.2 LAN+USB3.0 (CN4 \ CN5).....	12
1.7.3 VGA Connector (CN6).....	13
1.7.4 Audio Connector (CN7)	13
1.7.5 DC-in Phoenix Power Connector (CN8).....	13
1.7.6 HDMI Connector (CN9).....	14
1.7.7 SATA Power connector (SCN1 \ SCN2).....	14
1.7.8 SATA Connector (SATA1 \ SATA2)	15
1.7.9 ATX Power On/OFF Button (SW1).....	15
1.7.10 AT/ATX Switch (SW2)	16
1.7.11 Reset Button (SW3)	16
1.7.12 Remote Power Switch Connector (PWRBT1)	16
1.7.13 Flexible IO - COM I/O Card Connector (AX93511).....	17
1.7.14 Flexible IO – Isolated COM x4 I/O Card (AX93516)	17
1.7.15 Flexible IO – Isolated COM & DIO I/O Card (AX93512)	18
1.7.16 Flexible IO- USB3.0x2 & COMx2(RS232/422/485) & LAN1(AX93519)	19
1.7.17 Riser Card Power Output (ATX1-Black, ATX2-White)	20
CHAPTER 2 HARDWARE INSTALLATION.....	21
2.1 Installing the Processor	21
2.2 Installing the Memory Module.....	23
2.3 Installing the Hard Disk Drive	25
2.4 Installing add-on Cards	26
2.5 Installing the Wi-Fi Module.....	28
CHAPTER 3 AMI BIOS UTILITY	33
3.1 Starting	33

3.2	Navigation Keys	34
3.3	Main Menu	35
3.4	Advanced Menu.....	36
3.5	Chipset Menu	47
3.6	Security Menu	51
3.7	Boot Menu	52
3.8	Save & Exit Menu	53
APPENDIX A WATCHDOG TIMER.....		55
A.1	About Watchdog Timer.....	55
A.2	How to Use Watchdog Timer	55
A.3	Sample Program	56

CHAPTER 1 INTRODUCTION



This chapter contains general information and a detailed specification of the IPS960-511/IPS962-512 Series. Chapter 1 includes the following sections:

- General Description
- System Specifications
- Dimensions
- I/O Outlets
- Jumper Settings
- Connectors
- Package List

1.1 General Description

The IPS960-511/IPS962-512 Series fanless system comes with an LGA1151 socket that supports Intel® 6th/7th generation Core™ i7/i5/i3 processors. The IPS960-511/IPS962-512 Series supports Windows® 7 and Windows® 10 and has a rugged design suitable for the most endurable operation.

- In terms of storage capacity, the IPS960-511/IPS962-512 Series has two 2.5" HDD drive bays, which make system installation and maintenance easy for customers.

- Embedded O.S. Supported:

The IPS960-511/IPS962-512 Series not only supports Windows® 7 and Windows® 10 but also supports embedded OS, such as Windows® 7 embedded.

1.2 System Specifications

1.2.1 Main CPU Board

- **CPU**

- Socket LGA1151 for 6th /7th Generation Intel® Core™ i7/i5/i3 processors, up to 65W CPU support list is as below.

Generation	Processor	TDP	Core number	Thread number
Intel® 7 th gen.	i7-7700	65W	4	8
Intel® 7 th gen.	i5-7500	65W	4	4
Intel® 7 th gen.	i3-7101E	54W	2	4
Intel® 7 th gen.	i7-7700T	35W	4	8
Intel® 7 th gen.	i3-7101TE	35W	2	4
Intel® 7 th gen.	G3930TE	35W	2	2
Intel® 6 th gen.	i7-6700	65W	4	8
Intel® 6 th gen.	i5-6500	65W	4	4
Intel® 6 th gen.	i3-6100	51W	2	4
Intel® 6 th gen.	i7-6700TE	35W	4	8
Intel® 6 th gen.	i5-6500TE	35W	4	4
Intel® 6 th gen.	i3-6100TE	35W	2	4
Intel® 6 th gen.	G4400TE	35W	2	2

- **System Chipset**

- Intel® H110 chipset (IPS960-511)
 - Intel® Q170 chipset (IPS962-512)

- **BIOS**

- AMI BIOS, with Smart View and Customer CMOS Backup

- **System Memory**

- Two DDR4-2133/2400 un-buffered SO-DIMM max. up to 32GB

- **Features**

- Integrated vision I/O
 - Flexible design for machine vision
 - Supports 4 IEEE802.3at GbE LAN
 - Compact & Front IO design
 - Supports two expansion slots (IPS962-512)
 - DC to DC power supply supports 24VDC (uMin=19V/uMax=30V)
 - Supports two 2.5" HDDs Bays (IPC964-512 support RAID 0,1)
 - TPM2.0
 - Supports optional WLAN module & antenna

1.2.2 I/O System

● Standard I/O Interface -- Font

- One ATX power on/off switch
- One ATX/AT Mode switch
- One Reset switch
- One 2-pin connector output for remote power on/off switch
- 19VDC to 30VDC with phoenix power plug
- Four USB 3.0 ports
- HDD access/Power LEDs
- Two G.E. LAN ports (i211AT)
- Flexible IO
 - AX93511 4 x RS-232/422/485 module (default RS-232) or
 - AX93512 2 x RS-232/422/485 w/ isolated 1.5KVDC protection and 8-in/8-out isolated 1.5KVDC DIO or
 - AX93516 4 x RS232/422/485 w/isolated 2KVDC module
 - AX93519 2 x RS232/422/485 + 2 USB3.0 + 1 G.E. LAN (i211AT, for IPC962-512 and IPC964-512 only)
- One VGA supports resolution up to 1920 x 1200 @60Hz
- One HDMI.4b supports resolution up to 4096 x 2304 @60MHz
- Vision I/O
- Four G.E. LAN ports (Intel® I210-AT, IEEE802.3at)
- 1 x Audio (MIC-in/Line-out)

● Expansion Slot

IPS960-511

- 1 x on board full-size PCI Express Mini Card slot with USB interface

IPS962-512

- 1 x on board full-size PCI Express Mini Card slot with USB/PCIe interface
- 1 PCIe x16 Gen.3
- 1 PCIe x4 Gen.3



Note: The maximum power rating for expansion slots at 60°C cannot exceed the following value:

The maximum loading of +3.3V+5V+12V<75W(IPS962-512)



Note: Please refer to AX92350 user's manual for Vision I/O (LED lighting control setting: Duty 50% and duration time 3.5s)



Note: Please refer to AX92320 user's manual for Four G.E. LAN ports (Intel® I210-AT, IEEE802.3at compliant, total max. power output 60W)

1.2.3 System Specification

- **Drive Capacity**

- Supports two 2.5" HDD drive bays (SSD/HDD thickness<=15mm)



Note: Because Gen. 2 SSD with JMicron controller has compatibility issues with Intel H110 PCH, we strongly recommend using Gen. 3 SSD on IPS960-511 Series.

- **Power Input**

- 24VDC (uMin=19V/uMax=30V) with phoenix power plug

- **Operation Temperature**

- Ambient with air flow: -10°C ~ +55°C with 6th gen CPU and W.T. HDD or W.T. SSD
- Ambient with air flow: -10°C ~ +45°C with 7th gen CPU and W.T. HDD or W.T. SSD

- **Storage Temperature**

- -20°C ~ 80°C

- **Humidity**

- 10% ~ 90% (Non-condensing)

- **Dimensions**

- 147.5 mm (5.81") (W) x 192 mm (7.56") (H) x 230 mm (9.06") (D) (IPS960-511)
- 188.1 mm (7.39") (W) x 192 mm (7.54") (H) x 230 mm (9.04") (D) (IPS962-512)



Note: All specifications and images are subject to change without notice.

The performance of the system might be adversely affected at an operating temperature above 60°C.




Note: If the operating temperature is above 35°C, it is recommended to use a wide temperature SSD on the device.


1.3 Dimensions

The following diagrams show you the dimensions and outlines of the IPS960-511/IPS962-512 Series.

IPS960-511

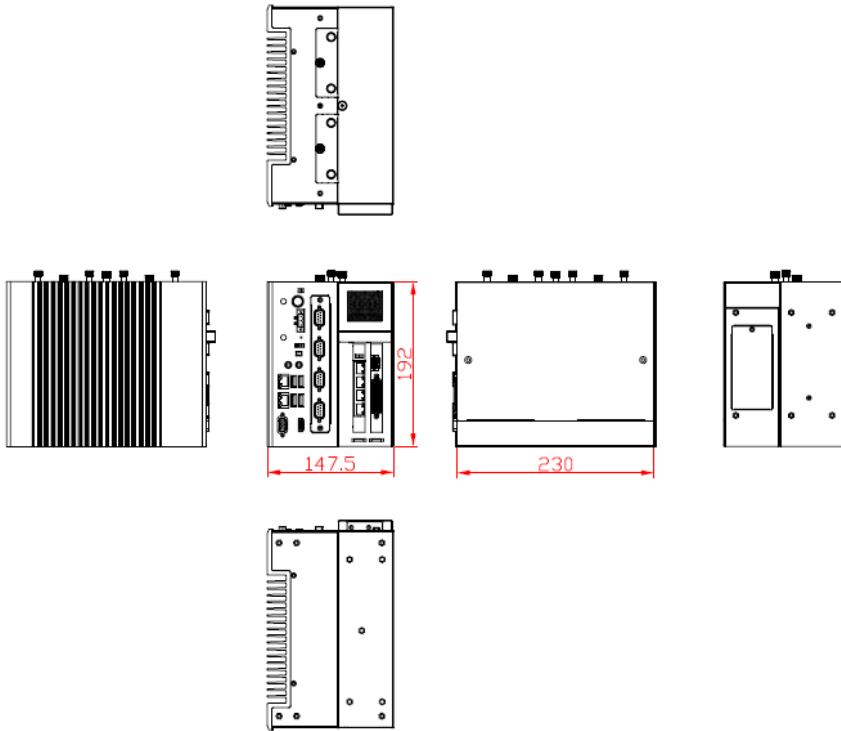

IPS962-512

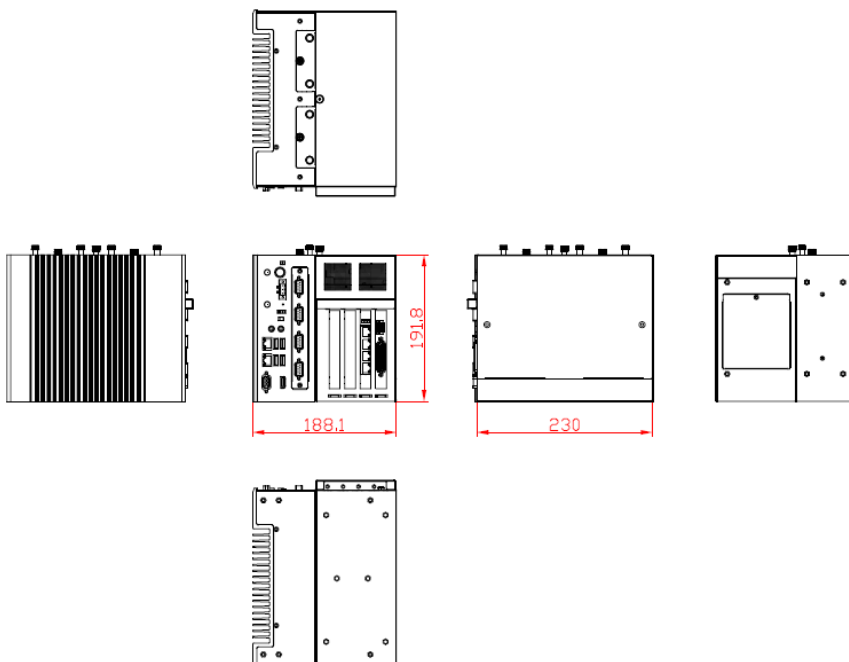

1.4 I/O Outlets

The following figures show you the I/O outlets on the front and rear panels of the IPS960-511/IPS962-512 Series.

IPS960-511

Front Panel



- | | | |
|----------------------------|-------------------|--|
| 1. Antenna opening x 2 | 7. Power switch | 12. (1) AX93511: 4 x RS-232/422/485 module (default RS-232) |
| 2. Remote switch | 8. Terminal block | (2) AX93512: 2 x RS-232/422/485 with isolated 1.5 kVDC protection & 8-in/8-out with isolated 1.5 kVDC DIO module |
| 3. Mic-in x 1/Line-out x 1 | 9. HDD/Power LED | (3) AX93516 4 x RS232/422/485 with isolated 1.5 kV |
| 4. Ethernet x 2 | 10. USB 3.0 x 4 | 13. 4 x GbE LAN ports (IEEE802.3at) |
| 5. VGA | 11. HDMI | 14. Real-time vision I/O |
| 6. Reset switch | | |

IPS962-512

Front Panel



- | | | |
|----------------------------|-------------------|--|
| 1. Antenna opening x 2 | 7. Power switch | 12. (1) AX93511: 4 x RS-232/422/485 module
(default RS-232) |
| 2. Remote switch | 8. Terminal block | (2) AX93512: 2 x RS-232/422/485 with isolated
1.5 kVDC protection & 8-in/8-out
with isolated 1.5 kVDC DIO module |
| 3. Mic-in x 1/Line-out x 1 | 9. HDD/Power LED | (3) AX93516 4 x RS-232/422/485 with isolated 1.5 kV |
| 4. Ethernet x 2 | 10. USB 3.0 x 4 | 13. 1 x PCIe x16 slot |
| 5. VGA | 11. HDMI | 14. 1 x PCIe x4 slot |
| 6. Reset switch | | 15. 4 x GbE LAN ports (IEEE802.3at) |
| | | 16. Real-time vision I/O |

1.5 Packing List

The package bundled with your IPS960-511/IPS962-512 Series should contain the following items:

- **IPS960-511 or IPS962-512 Series unit x 1**
- **Driver CD**
- **Screw pack x 1**
- **Foot pad x 4**
- **CPU grease x 1**
- **Terminal block x 1**
- **Remote switch cable x 1**
- **Holder bracket x1**

If you cannot find this package or any items are missing, please contact Axiomtek distributors immediately.

1.6 Jumper Settings

Properly configure jumper settings on the IPS960-511/IPS962-512 to meet your application purpose. Below you can find a summary table of all jumpers and onboard default settings.



Note: How to setup Jumpers

Put a cap on a jumper to close the jumper; remove the cap to open the jumper.



[Open]



[Closed]



[Pin1-2 Closed]

Jumper	Descriptions	Setting
JP1	Clear RTC : Normal	Short 1-2

1.6.1 Restore BIOS Optimal Defaults (JP1)

Put the jumper clip on pin 2-3 for a few seconds then move it back to pin 1-2. Doing this procedure can restore optimal BIOS defaults.

Function	Setting
Normal operation (Default)	1-2 close
Restore BIOS optimal defaults	2-3 close



1.7 Connectors

Connectors connect this board with other parts of the system. Loose or improper connection might cause problems. Make sure all connectors are properly and firmly connected.


Here is a table that summarizes all connectors on the board.

Connector	Label
Mini Card slot	CN3
LAN1+USB3.0	CN4
LAN2+USB3.0	CN5
VGA connector	CN6
Audio connector	CN7
DC-in Phoenix power connector	CN8
HDMI connector	CN9
SATA power connector	SCN1、SCN2
SATA III connector	SATA1~2
DDR4 SO-DIMM (260 Pin)	SDIMM1、SDIMM2
Power button	SW1
AT/ATX Power Select	SW2
Reset button	SW3
Remote SW	PWRBT1
Flexible IO- COM x4 (RS232/422/485)	AX93511
Flexible IO – isolated COM x4 (RS232/422/485)	AX93516
Flexible IO – isolated COM x2 (RS232/422/485) & DIO x2(8xDIO)	AX93512
Riser card power output	ATX1,ATX2

1.7.1 MINI CARD SLOT (CN3)

A PCI-Express Mini Card connector is located on the top side applying USB 2.0. It supports a USB mini card.


Pins	Signals	Pins	Signals
1	WAKE#	2	+3.3VSB
3	No use	4	GND
5	No use	6	+1.5V
7	CLKREQ#	8	No use
9	GND	10	No use
11	REFCLK-	12	No use
13	REFCLK+	14	No use
15	GND	16	No use
17	No use	18	GND
19	No use	20	W_DISABLE#
21	GND	22	PERST#
23	PE_RXN3/	24	+3.3VSB
25	PE_RXP3/	26	GND
27	GND	28	+1.5V
29	GND	30	SMB_CLK
31	PE_TXN3/	32	SMB_DATA
33	PE_TXP3/	34	GND
35	GND	36	USB_D8-
37	GND	38	USB_D8+
39	+3.3VSB	40	GND
41	+3.3VSB	42	No use
43	GND	44	No use
45	No use	46	No use
47	No use	48	+1.5V
49	No use	50	GND
51	No use	52	+3.3VSB

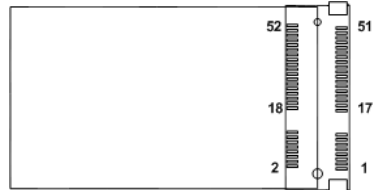

1.7.2 LAN+USB3.0 (CN4、CN5)

The system has two RJ-45 connectors: LAN1 and LAN2. Ethernet connection can be established by plugging one end of the Ethernet cable into this RJ-45 connector and the other end (phone jack) to a 1000/100/10-Base-T hub.

Pins	1000 Base-T	100/10 Base-T	Descriptions
L1	BI_DA+	TX+	Bidirectional or Transmit Data+
L2	BI_DA-	TX-	Bidirectional or Transmit Data-
L3	BI_DB+	RX+	Bidirectional or Receive Data+
L4	BI_DC+	N.C.	Bidirectional or Not Connected
L5	BI_DC-	N.C.	Bidirectional or Not Connected
L6	BI_DB-	RX-	Bidirectional or Receive Data-
L7	BI_DD+	N.C.	Bidirectional or Not Connected
L8	BI_DD-	N.C.	Bidirectional or Not Connected
A	Active Link LED (Yellow) Off: No link Blinking: Data activity detected		
B	Speed LED 1000: Orange 100: Green 10: OFF		

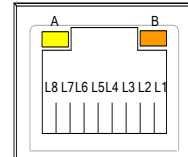


The Universal Serial Bus connectors are compliant with USB 3.0 (5Gb/s), ideal for installing USB peripherals such as scanners, cameras and other USB devices.

Pins	Signal USB Port 0	Pins	Signal USB Port 1
1	USB_VCC (+5V level standby power)	10	USB_VCC (+5V level standby power)
2	USB_Data2-	11	USB_Data3-
3	USB_Data2+	12	USB_Data3+
4	GND	13	GND
5	SSRX2-	14	SSRX3-
6	SSRX2+	15	SSRX3+
7	GND	16	GND
8	SSTX2-	17	SSTX3-
9	SSTX2+	18	SSTX3+

1.7.3 VGA Connector (CN6)

The CN9 is a 15-pin D-Sub connector which is commonly used for a CRT monitor.


Pins	Signals	Pins	Signals
1	Red	2	Green
3	Blue	4	N.C.
5	GND	6	DETECT
7	GND	8	GND
9	+5V	10	GND
11	N.C.	12	DDC DATA
13	Horizontal Sync	14	Vertical Sync
15	DDC CLK		

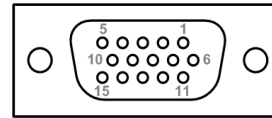

1.7.4 Audio Connector (CN7)

These two audio jacks are ideal for Audio Mic-in and Audio Line-out.


Pins	Signals
1	Line Out
2	Microphone In

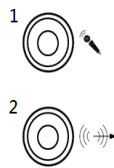

1.7.5 DC-in Phoenix Power Connector (CN8)

The system supports the 24VDC (uMin=19V/uMax=30V) Phoenix DC-in connector for system power input.


Pins	Signals
1	DC+
2	GND
3	DC-

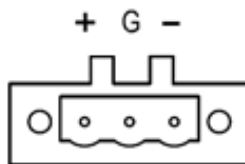

1.7.6 HDMI Connector (CN9)

The HDMI (High-Definition Multimedia Interface) is a compact digital interface which is capable of transmitting high-definition video and high-resolution audio over a single cable.


Pins	Signals	Pins	Signals
1	HDMI OUT_DATA2+	11	GND
2	GND	12	HDMI OUT Clock-
3	HDMI OUT_DATA2-	13	N.C.
4	HDMI OUT_DATA1+	14	N.C.
5	GND	15	HDMI OUT_SCL
6	HDMI OUT_DATA1-	16	HDMI OUT_SDA
7	HDMI OUT_DATA0+	17	GND
8	GND	18	+5V
9	HDMI OUT_DATA0-	19	HDMI_HTPLG
10	HDMI OUT Clock+		

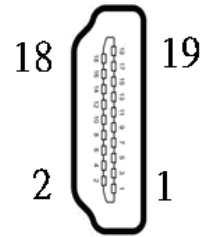

1.7.7 SATA Power connector (SCN1 、SCN2)

Use SCN1 、SCN2 for interfacing to SATA 2.5" HDD power supply.


Pins	Signals
1	+12V level
2	GND
3	GND
4	+5V level

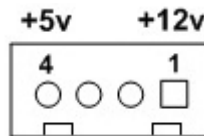

1.7.8 SATA Connector (SATA1、SATA2)

These Serial Advanced Technology Attachment (Serial ATA or SATA) connectors are for high-speed SATA interfaces. They are computer bus interfaces for connecting to devices such as hard disk drives. This board has two SATA 3.0 ports with 6Gb/s performance.

Pins	Signals
1	GND
2	SATA_TX+
3	SATA_TX-
4	GND
5	SATA_RX-
6	SATA_RX+
7	GND

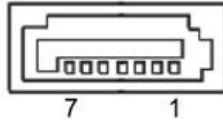

1.7.9 ATX Power On/OFF Button (SW1)


The ATX power button is on the I/O side. It allows users to control SBC87853 power on/off.

Function	Description
On	Turn on/off system
Off	Keep system status



1.7.10 AT/ATX Switch (SW2)

If you set AT/ATX switch to AT mode, the system will be automatically powered on without having to press the soft power button during power input. We can use this switch to achieve auto power on demand.

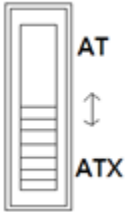

1.7.11 Reset Button (SW3)

The Reset button allows users to reset SBC87853.


Function	Description
On	Reset system
Off	Keep system status



1.7.12 Remote Power Switch Connector (PWRBT1)

The system has one 2-pin connector output for remote power on/off switch.

Function	Description
Short(1-2)	Turn on/off system
Open	Keep system status

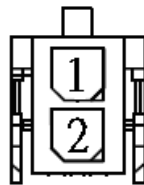


1.7.13 Flexible IO - COM I/O Card Connector (AX93511)

The system has four serial ports. COM1~COM4 are RS-232/422/485 ports. Please refer to Chapter 4 for the details of BIOS settings.

※COM1, COM2, COM3, COM4

Pins	RS-232	RS-422	RS-485
1	DCD, Data Carrier Detect	TX-	Data-
2	RXD, Receive Data	TX+	Data+
3	TXD, Transmit Data	RX+	No use
4	DTR, Data Terminal Ready	RX-	No use
5	GND, Ground	No use	No use
6	DSR, Data Set Ready	No use	No use
7	RTS, Request To Send	No use	No use
8	CTS, Clear To Send	No use	No use
9	RI, Ring Indicator	No use	No use




1.7.14 Flexible IO – Isolated COM x4 I/O Card (AX93516)

The system has four serial ports. COM1~COM4 are RS-232/422/485 with isolated 1.5KV ports. Please refer to Chapter 4 for the details of BIOS settings.

※COM1, COM2, COM3, COM4

Pins	RS-232	RS-422	RS-485
1	DCD, Data Carrier Detect	TX-	Data-
2	RXD, Receive Data	TX+	Data+
3	TXD, Transmit Data	RX+	No use
4	DTR, Data Terminal Ready	RX-	No use
5	GND, Ground	No use	No use
6	DSR, Data Set Ready	No use	No use
7	RTS, Request To Send	No use	No use
8	CTS, Clear To Send	No use	No use
9	RI, Ring Indicator	No use	No use
10	GND_EARTH	No use	No use

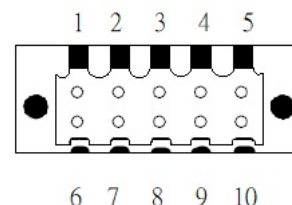


1.7.15 Flexible IO – Isolated COM & DIO I/O Card (AX93512)


The system has four serial ports. COM1~COM2 are RS-232/422/485 with isolated 1.5KVDC protection and DIO1~DIO2 8-in/8-out isolated 1.5KVDC DIO ports. Please refer to Chapter 4 for the details of BIOS settings.

※COM1,COM2,DIO1,DIO2

CN1 (COM1)& CN2(COM2)			
Pins	RS-232	RS-422	RS-485
1	DCD, Data Carrier Detect	TX-	Data-
2	RXD, Receive Data	TX+	Data+
3	TXD, Transmit Data	RX+	No use
4	DTR, Data Terminal Ready	RX-	No use
5	GND, Ground	No use	No use
6	DSR, Data Set Ready	No use	No use
7	RTS, Request To Send	No use	No use
8	CTS, Clear To Send	No use	No use
9	RI, Ring Indicator	No use	No use
10	GND_EARTH	No use	No use

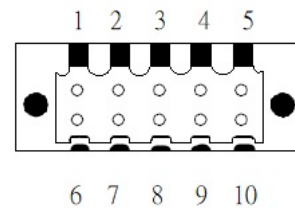


CN3(DIO1)		CN4(DIO2)	
Pin	Function	Pin	Function
1	Common1 PWR+	1	Common2 PWR+
2	DO10	2	DO20
3	DO11	3	DO21
4	DO12	4	DO22
5	DO13	5	DO23
6	Common1 PWR-	6	Common2 PWR-
7	External1 Power	7	External2 Power
8	DI10	8	DI20
9	DI11	9	DI21
10	DI12	10	DI22
11	DI13	11	DI23
12	Isolation1 GND	12	Isolation2 GND

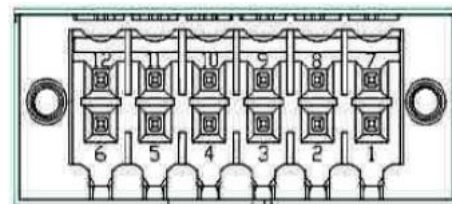

1.7.16 Flexible IO- USB3.0x2 & COMx2(RS232/422/485) & LAN1(AX93519)

The Universal Serial Bus connectors are compliant with USB 3.0 (5Gb/s), and ideally for installing USB peripherals such as scanner, camera and USB devices, etc.


Pins	Signal USB Port 0	Pins	Signal USB Port 1
1	USB_VCC (+5V level standby power)	1	USB_VCC (+5V level standby power)
2	USB_Data2-	2	USB_Data3-
3	USB_Data2+	3	USB_Data3+
4	GND	4	GND
5	SSRX2-	5	SSRX3-
6	SSRX2+	6	SSRX3+
7	GND	7	GND
8	SSTX2-	8	SSTX3-
9	SSTX2+	9	SSTX3+

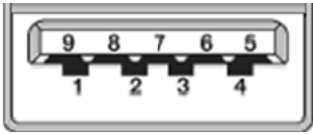

The system has four serial ports. COM1~COM2 are RS-232/422/485 ports. Please refer to Chapter 4 for the detail of BIOS setting.


※**COM1,COM2.**

Pins	RS-232	RS-422	RS-485
1	DCD, Data Carrier Detect	TX-	Data-
2	RXD, Receive Data	TX+	Data+
3	TXD, Transmit Data	RX+	No use
4	DTR, Data Terminal Ready	RX-	No use
5	GND, Ground	No use	No use
6	DSR, Data Set Ready	No use	No use
7	RTS, Request To Send	No use	No use
8	CTS, Clear To Send	No use	No use
9	RI, Ring Indicator	No use	No use

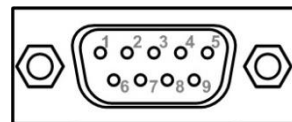

The system has two RJ-45 connectors: LAN1 Ethernet connection can be established by plugging one end of the Ethernet cable into this RJ-45 connector and the other end (phone jack) to a 1000/100/10-Base-T hub.

Pins	1000 Base-T	100/10 Base-T	Descriptions
L1	BI_DA+	TX+	Bidirectional or Transmit Data+
L2	BI_DA-	TX-	Bidirectional or Transmit Data-
L3	BI_DB+	RX+	Bidirectional or Receive Data+
L4	BI_DC+	N.C.	Bidirectional or Not Connected
L5	BI_DC-	N.C.	Bidirectional or Not Connected
L6	BI_DB-	RX-	Bidirectional or Receive Data-
L7	BI_DD+	N.C.	Bidirectional or Not Connected
L8	BI_DD-	N.C.	Bidirectional or Not Connected
A	Active Link LED (Yellow) Off: No link Blinking: Data activity detected		
B	Speed LED 1000: Orange 100: Green 10: OFF		

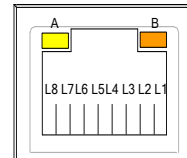

1.7.17 Riser Card Power Output (ATX1-Black, ATX2-White)

Pins	Signals
1	GND
2	GND
3	+12V
4	+12V



ATX2

Pins	Signals
1	GND
2	GND
3	+24V
4	+24V



ATX1

CHAPTER 2 HARDWARE INSTALLATION

The IPS960-511/IPS962-512 Series is convenient for your various hardware configurations, such as CPU (Central Processing Unit), memory module, HDD (Hard Disk Drive) and PCIe/PCI card. Chapter 2 will show you how to install these hardware parts.

2.1 Installing the Processor

The Intel® Core™ i7/i5/i3 processors are available as a boxed processor for the IPS960-511/IPS962-512 system. Intel recommends the processors should be installed by a qualified computer professional since this electronic device may cause serious damage to the installer, system and processor if installed improperly.

Important Notes Before attempting to install a new processor, carefully review the documentation that came with your system and make sure that you will not be voiding your warranty by opening the computer or replacing your processor.

Instructions:


1. Make sure that your system can accommodate the Intel® Core™ i7/i5/i3/Celeron® Processors that you want to install. Check for CPU card, BIOS, and thermal compatibility by using the manufacturer's documentation for the system, or by consulting the vendor if necessary. The processor should only be installed in systems supporting the Intel® Core™ i7/i5/i3/Celeron® Processors.
2. Obtain access to your processor socket as described in the documentation for your system.
3. If the cooling solution prevents you from accessing the processor socket, you may need to remove it. Instructions on how to remove your cooling solution should be provided in the documentation that came with the system.

Procedure of Installation:

- Step 1** Turn off the system.
- Step 2** Disconnect the power connector.
- Step 3** Loosen screws to remove the heatsink cover from the chassis.



- Step 4** After opening the heatsink cover, you can locate the CPU socket as marked. Align pins of the CPU with pin holes of the socket. Beware of the CPU's orientation by aligning the arrow mark on the CPU with the arrow key on the socket. Remove the Mylar before installing the CPU into the socket.

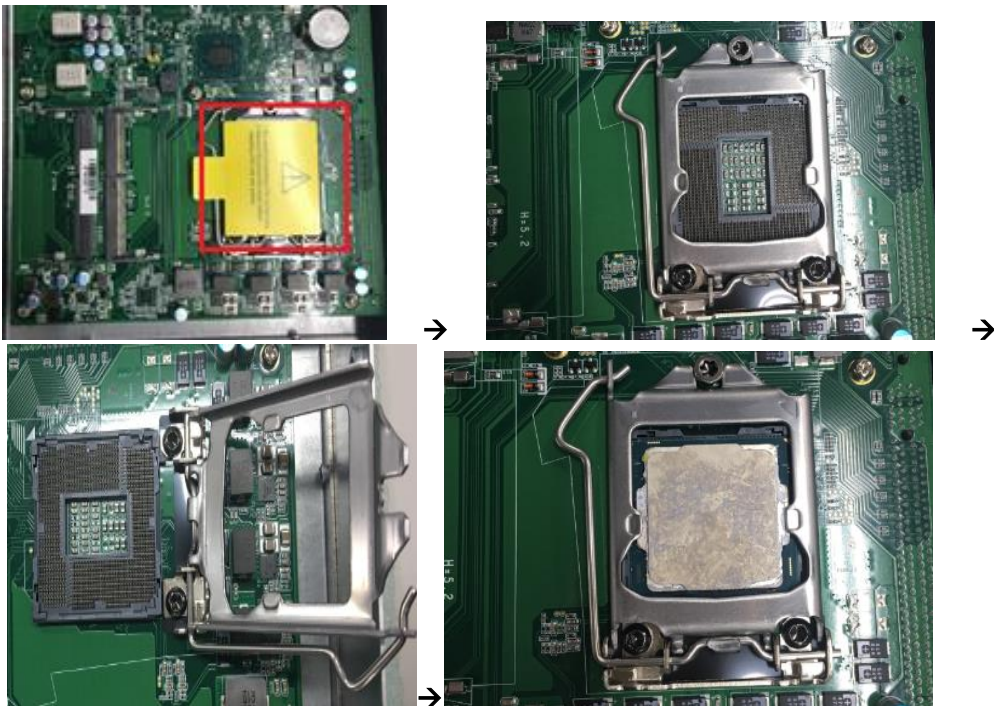

Step 5 Apply thermal grease on top of the CPU



Step 6 After installing all components, close the heatsink cover back to the chassis and fasten all screws.



2.2 Installing the Memory Module


Step 1 Turn off the system.

Step 2 Disconnect the power connector.

Step 3 Loosen screws to remove the heatsink cover from the chassis.



- Step 4** Install the SO-DIMM (small outline dual in-line memory module) into the socket and push it firmly down until it is fully seated. The socket latches are clipped onto the edges of the SO-DIMM.

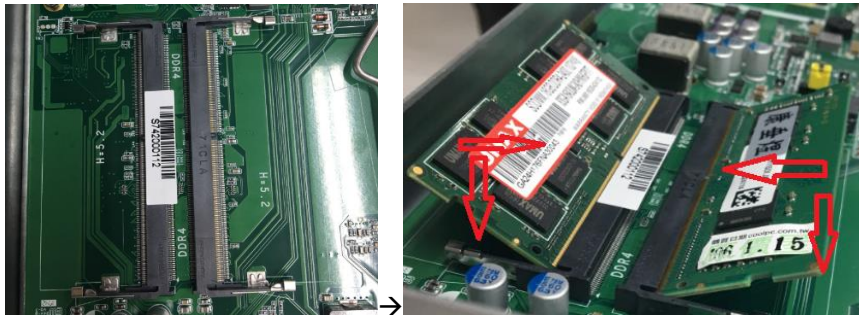

- Step 5** After installing the memory modules, close the heatsink cover back to the chassis and fasten all screws.


2.3 Installing the Hard Disk Drive

The IPS960-511/IPS962-512 Series offers a convenient drive bay module for users to install HDD. The system offers users two 2.5" Hard Disk Drives for installation. Please follow the steps:


Step 1 Turn off the system.

Step 2 Disconnect the power connector.

Step 3 Unscrew the thumbscrew and remove the bracket from the HDD tray.

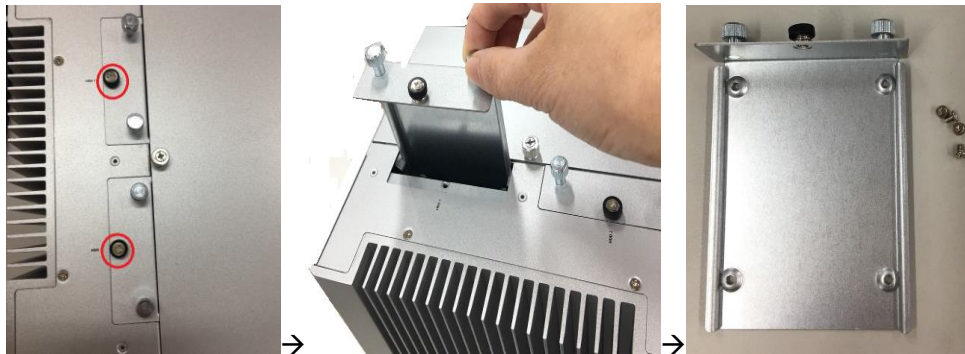

Step 4 Fix the bracket onto the HDD bracket with four screws.

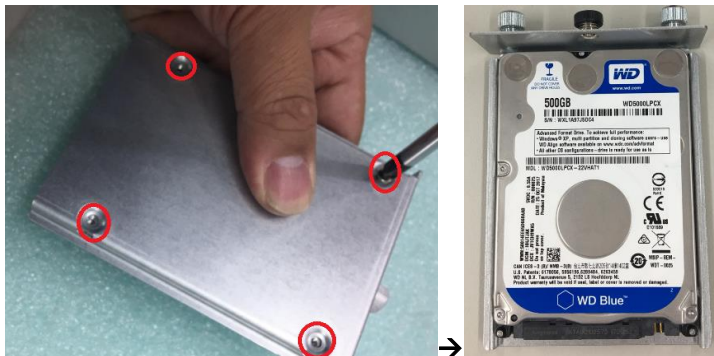

Step 5 Insert the HDD module into the HDD tray and screw it.




2.4 Installing add-on Cards

IPS962-512 provides two PCIe slots for expansion. The procedure of installing a PCIe expansion card into IPS962-512 is described below.


Step 1 Turn off the system.

Step 2 Disconnect the power connector.


Step 3 Unscrew the thumbscrew and remove the cover from the expansion box.

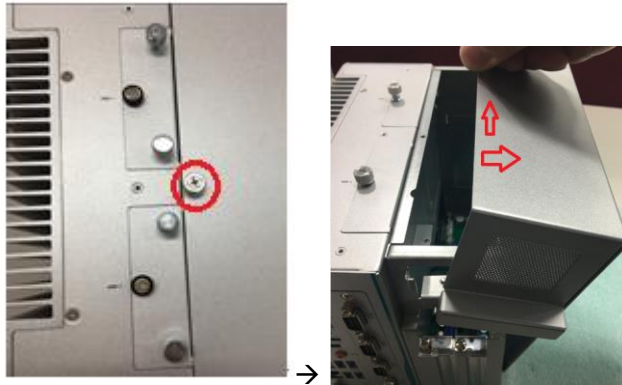


Step 4 Unscrew the screws of the holder bracket.

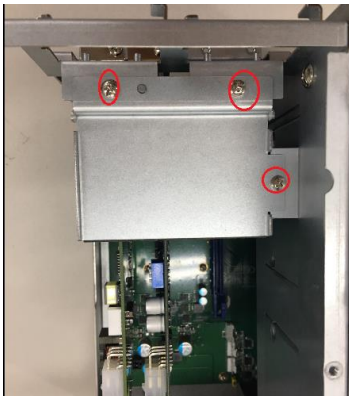


Step 5 Remove the slot bracket and locate the slot where you want to add the card.

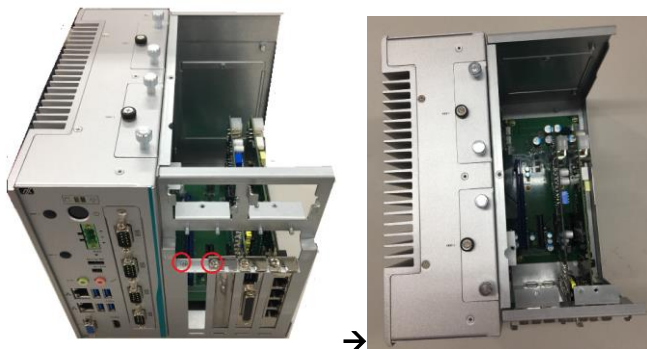


Step 6 Align the add-on card with the slot and then press the card into the slot until it is firmly seated. Screw the card firmly to the chassis.

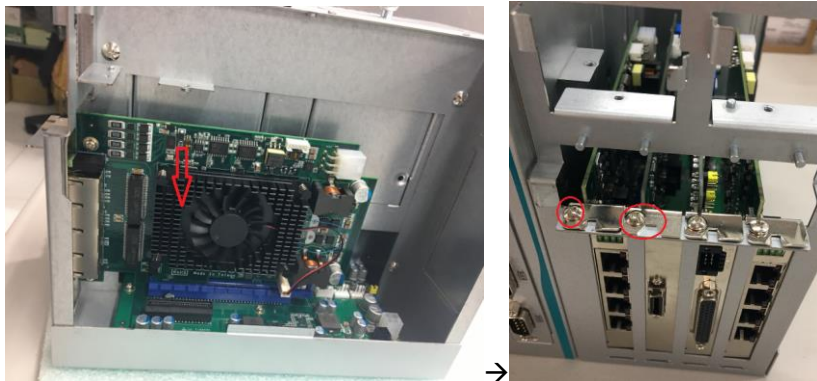

Step 7 Fasten the three screws to fix the holder bracket.

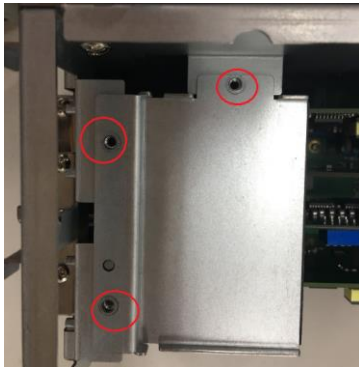

Step 8 Close the cover back to the chassis and fasten all screws.

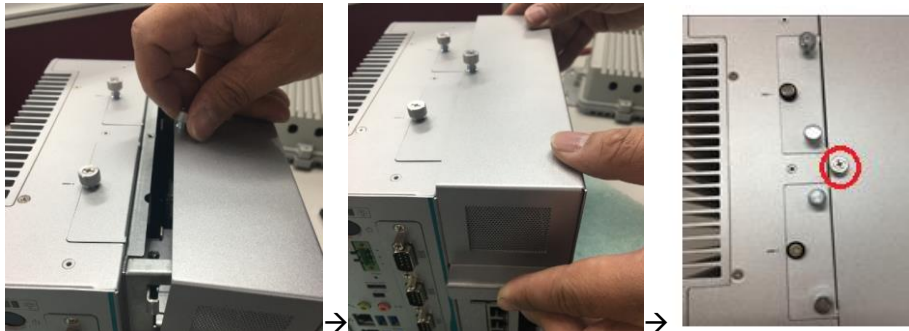

2.5 Installing the Wi-Fi Module


The IPS960-511 and IPS962-512 come with a Mini Card slot and a USB connector for users to install a wireless LAN card. Please refer to the following instructions and illustrations for the installation of the wireless LAN.

Installing the Wi-Fi Module via Mini card

- Step 1** Turn off the system.
- Step 2** Disconnect the power connector.
- Step 3** Loosen screws to remove the heatsink cover from the chassis.



- Step 4** Insert the wireless LAN card into slot. Push it down firmly. Then screw the card tightly to the mainboard

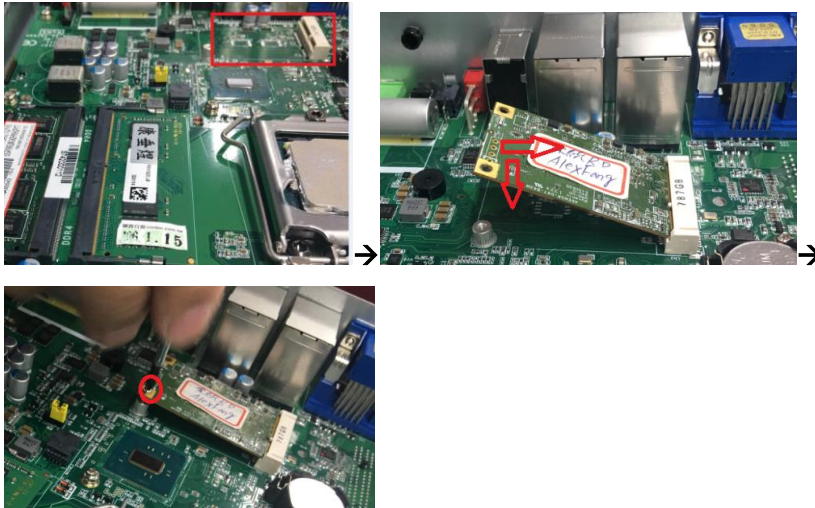

- Step 5** Remove the antenna plug from the top of the back cover, and then install the antenna on the antenna connector.




Note: Please use an extended bracket when using a half-size Mini card


- 1 x on board full-size PCI Express Mini Card slot with USB interface (IPS960-511)
- 1 x on board full-size PCI Express Mini Card slot with USB/PCIe interface (IPS962-512)

Installing the Wi-Fi Module via USB


- Step 1** Turn off the system.
- Step 2** Disconnect the power connector.
- Step 3** Loosen screws to remove the heatsink cover from the chassis.
- Step 4** Remove the antenna plug from the top of the back cover, and then install the antenna on the antenna connector

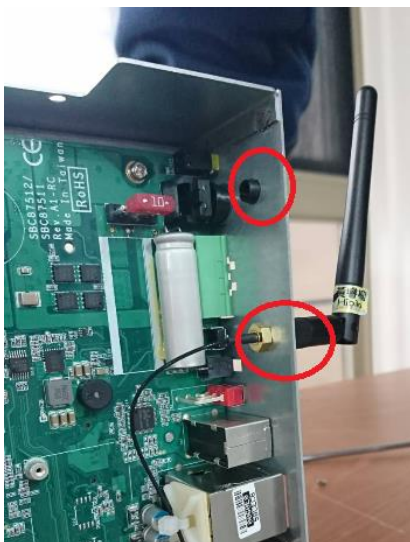

Step 5 Unscrew the thumbscrew and remove the cover from the expansion box.

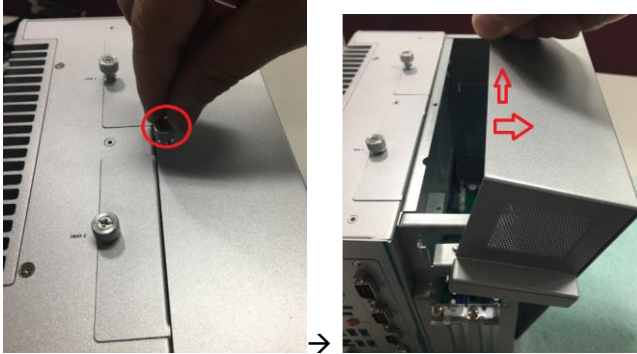


Step 6 Connect the antenna to the Wi-Fi module via the bottom of main board.

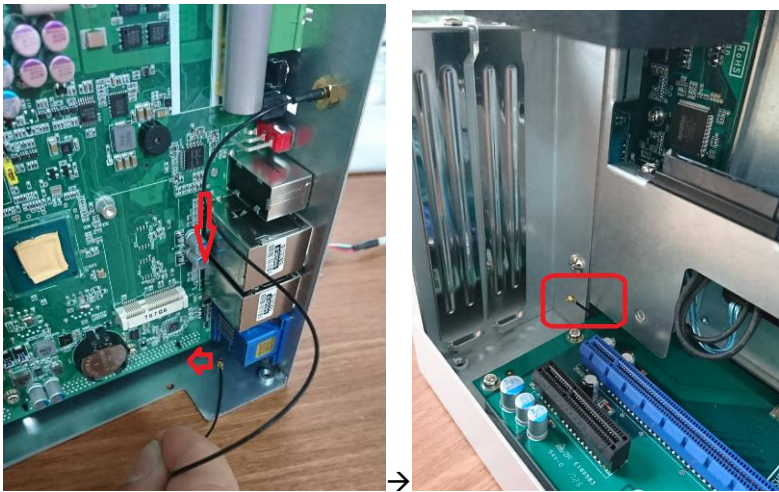


Step 7 Connect the USB cable to the Wi-Fi module.



Step 8 Stick the Wi-Fi module on the chassis. Locate the antenna cable and connect it to the wireless LAN card, then connect the USB cable to the USB connector.

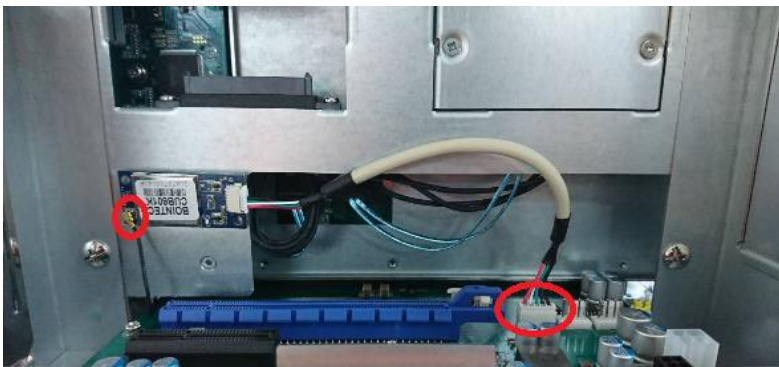

Step 9 Close the cover back to the chassis and fasten all screws. The installation is completed.

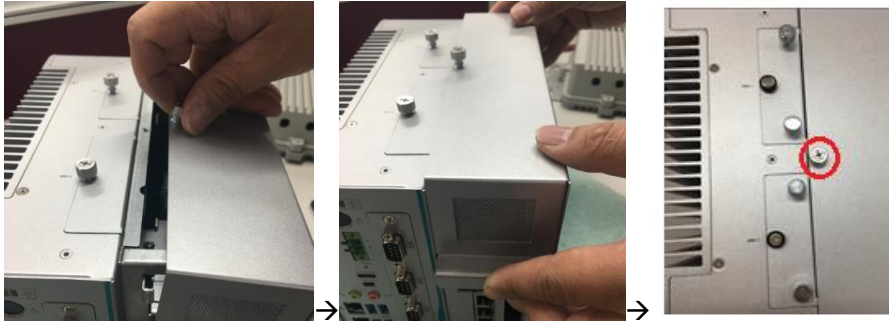

This page is intentionally left blank.

CHAPTER 3

AMI BIOS UTILITY

The AMI UEFI BIOS provides users with a built-in setup program to modify basic system configuration. All configured parameters are stored in a 16MB flash chip to save the setup information whenever the power is turned off. This chapter provides users with detailed description about how to set up basic system configuration through the AMI BIOS setup utility.

3.1 Starting

To enter the setup screens, follow the steps below:

1. Turn on the computer and press the key immediately.
2. After you press the key, the main BIOS setup menu displays. You can access the other setup screens from the main BIOS setup menu, such as the Advanced and Chipset menus.



Note: *If your computer cannot boot after making and saving system changes with Setup, you can restore BIOS optimal defaults by setting JP1 (see section 1.6.2).*

It is strongly recommended that you should avoid changing the chipset's defaults. Both AMI and your system manufacturer have carefully set up these defaults that provide the best performance and reliability.

3.2 Navigation Keys

The BIOS setup/utility uses a key-based navigation system called hot keys. Most of the BIOS setup utility hot keys can be used at any time during the setup navigation process. These keys include <F1>, <F2>, <Enter>, <ESC>, <Arrow> keys, and so on.




Note: *Some of the navigation keys differ from one screen to another.*

Hot Keys	Description
→← Left/Right	The Left and Right <Arrow> keys allow you to select a setup screen.
↑↓ Up/Down	The Up and Down <Arrow> keys allow you to select a setup screen or sub-screen.
+– Plus/Minus	The Plus and Minus <Arrow> keys allow you to change the field value of a particular setup item.
Tab	The <Tab> key allows you to select setup fields.
F1	The <F1> key allows you to display the General Help screen.
F2	The <F2> key allows you to Load Previous Values.
F3	The <F3> key allows you to Load Optimized Defaults.
F4	The <F4> key allows you to save any changes you have made and exit Setup. Press the <F4> key to save your changes.
Esc	The <Esc> key allows you to discard any changes you have made and exit the Setup. Press the <Esc> key to exit the setup without saving your changes.
Enter	The <Enter> key allows you to display or change the setup option listed for a particular setup item. The <Enter> key can also allow you to display the setup sub- screens.

3.3 Main Menu

The first time you enter the setup utility, you will be in the Main setup screen. You can always return to the Main setup screen by selecting the Main tab. System Time/Date can be set up as described below. The Main BIOS setup screen is shown below.

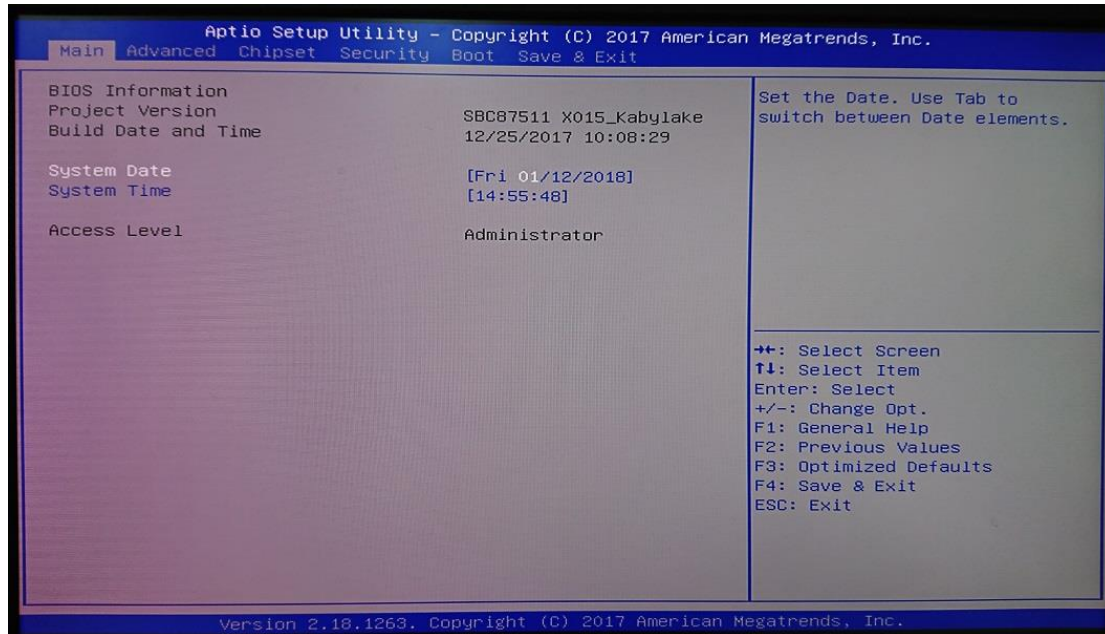

- System Date/Time Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The time is entered in HH:MM:SS format.

3.4 Advanced Menu


- **Launch PXE OpROM**

Use this item to enable or disable the boot ROM function of the onboard LAN chip when the system boots up.

The Advanced menu also allows users to set configuration of the CPU and other system devices. You can select any of the items in the left frame of the screen to go to the sub menus:

- ▶ Hardware Monitor
- ▶ Ethercat Configuration
- ▶ ACPI Settings
- ▶ Trusted Computing
- ▶ CPU Configuration
- ▶ SATA Configuration
- ▶ PCH-FW Configuration
- ▶ USB Configuration
- ▶ CSM Confiruation
- ▶ Utility Configuration
- ▶ Device Configuration

For items marked with “▶”, please press <Enter> for more options.

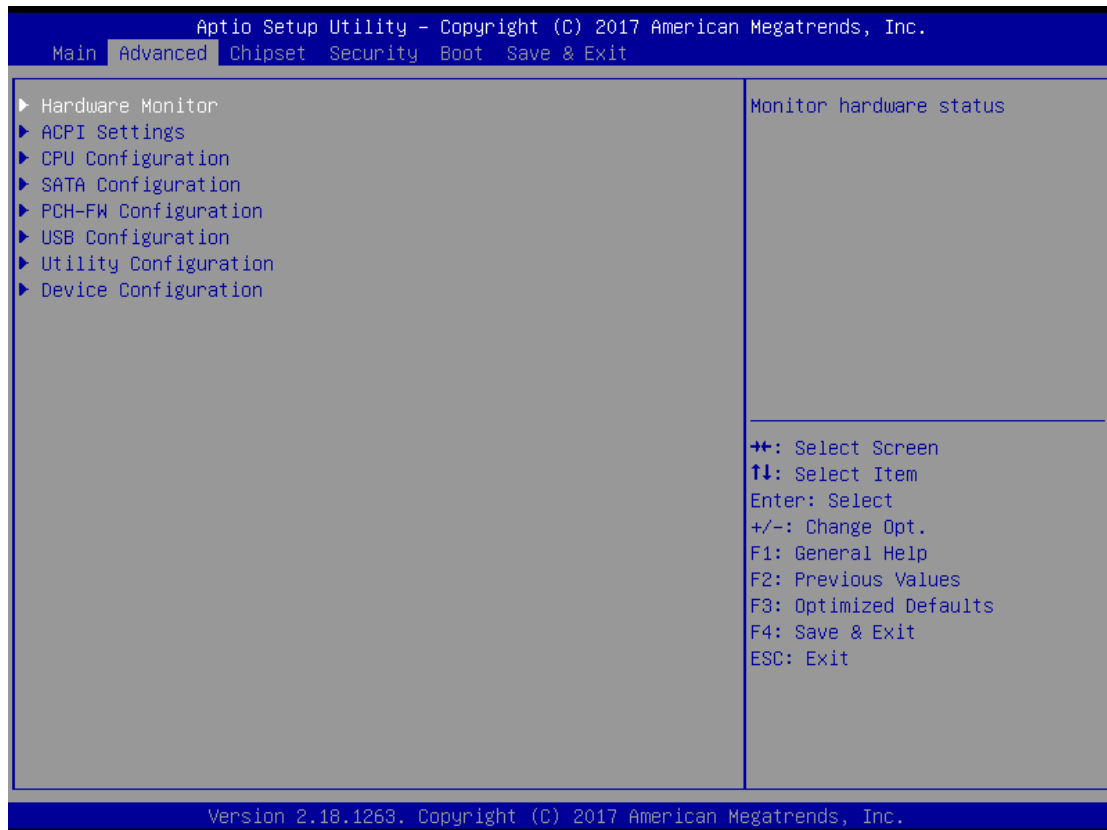

- **Hardware Monitor**

This screen monitors hardware health.

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.

Advanced

Pc Health Status


CPU temperature	: +70 %
VBAT	: +2.976 V
+5V	: +4.960 V
+5VSB	: +5.088 V
+3.3V	: +3.264 V
+3.3VSB	: +3.312 V

⇐⇐: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc.


- **Ethercat Configuration**

Setting "Disable" mode in the following 5 times to support the ethercat.

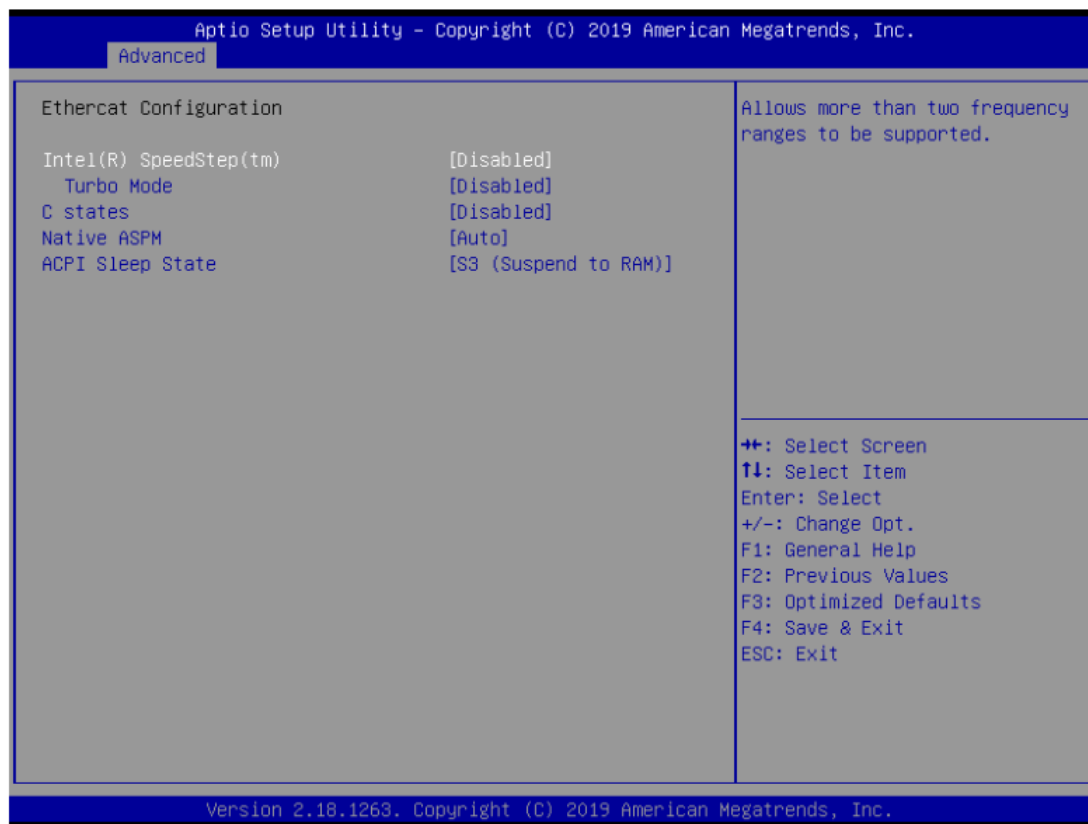

- **ACPI Settings**

ACPI configuration can be configured in ACPI Settings. A description of the selected item appears on the right side of the screen.

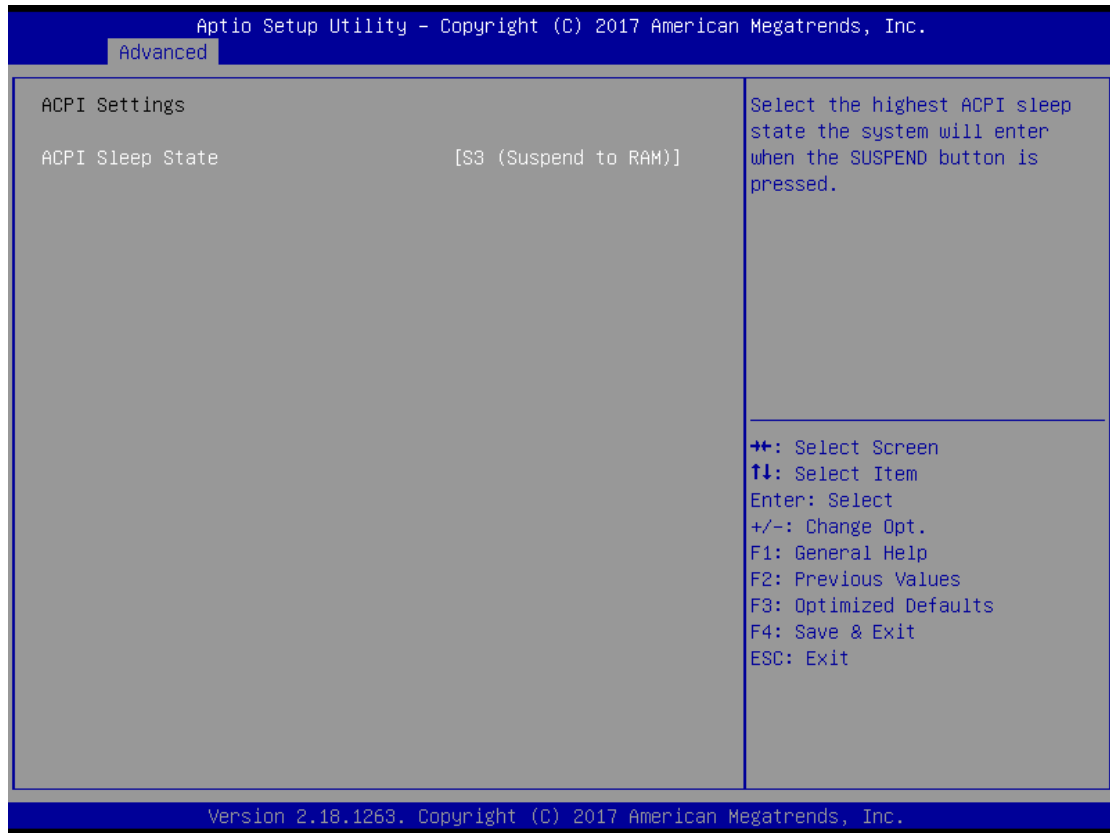


- **ACPI Sleep State**

Select the highest ACPI sleep state the system will enter when the suspend button is pressed. Configuration options are Suspend S3 only (Suspend to RAM).


- **Tursted Computing**

Select the Security Device Support to enable or disable the TPM function.

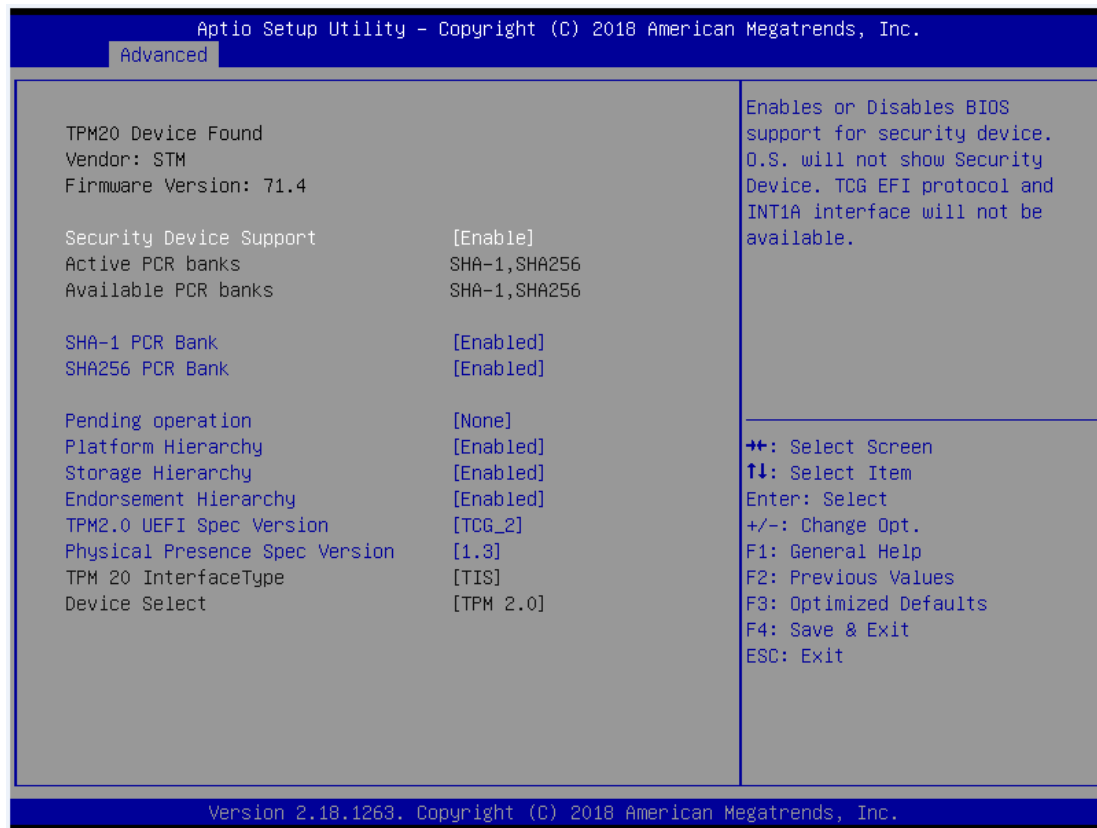

● **CPU Configuration**

This screen shows the CPU Configuration, and you can change the value of the selected option.

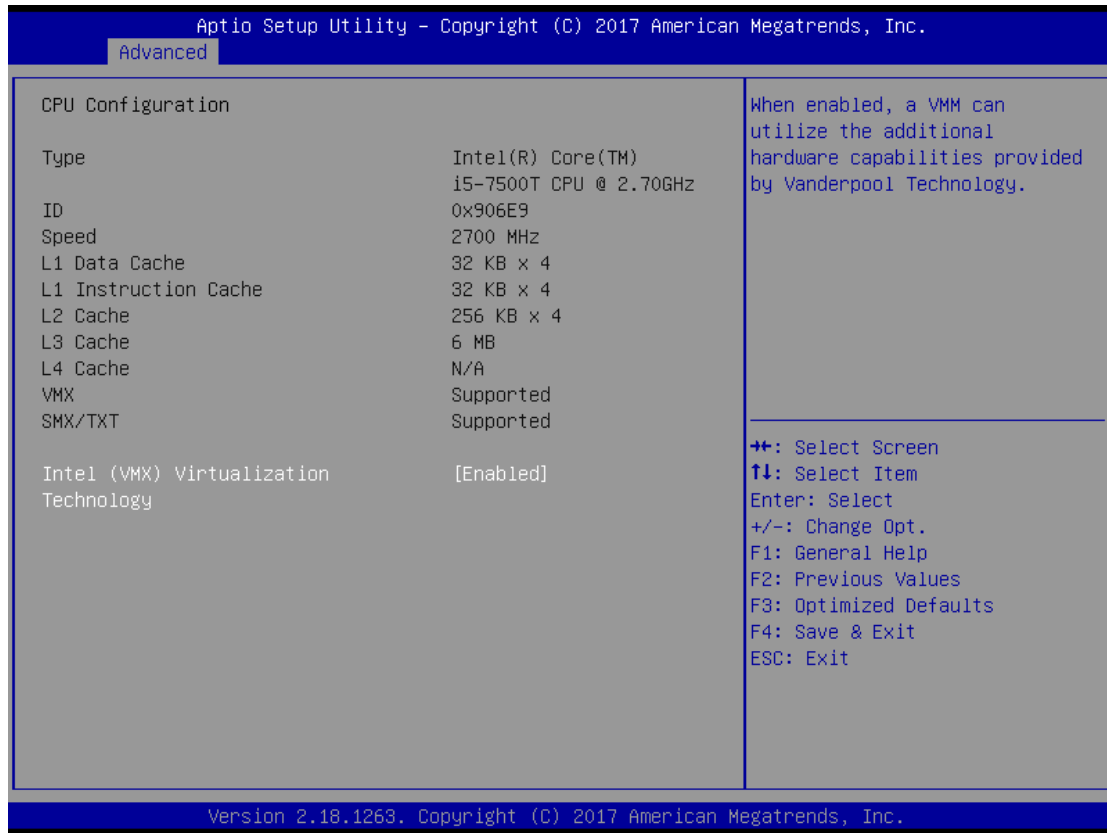


➤ **Intel Virtualization Technology**

This item allows a hardware platform to run multiple operating systems separately and simultaneously, enabling one system to virtually function as several systems.


- **SATA Configuration**

You can read the current installed hardware configurations from those SATA ports in the SATA Configuration menu. During system boot up, BIOS will detect the present SATA devices automatically.

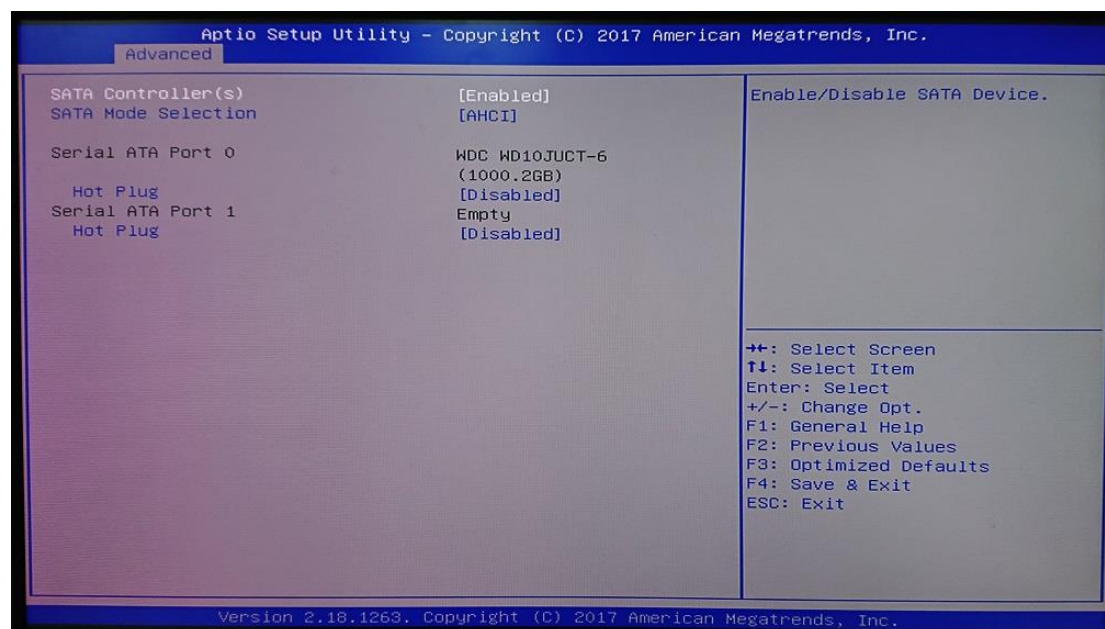


- **FCH-FW Configuration**

Display ME firmware information

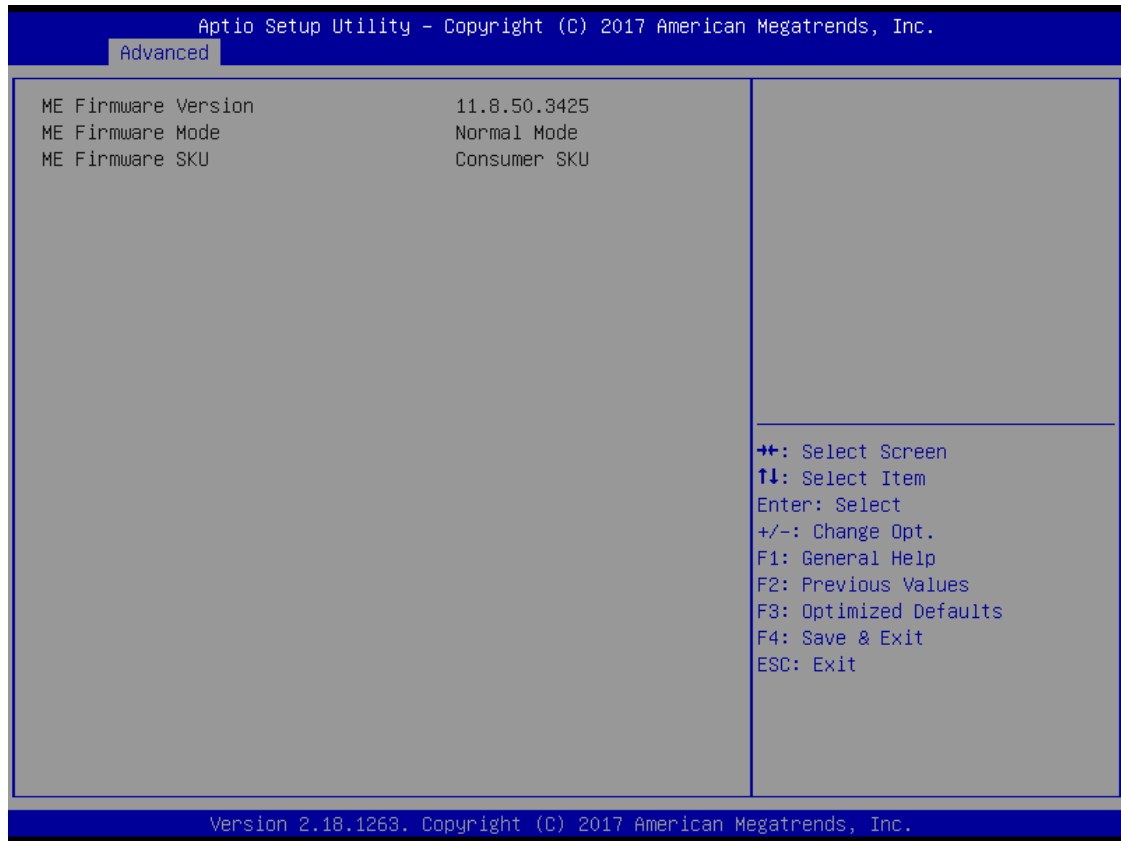

- **USB Configuration**


USB configuration can be configured here by selecting and changing each item. A description of the selected item appears on the right side of the screen.

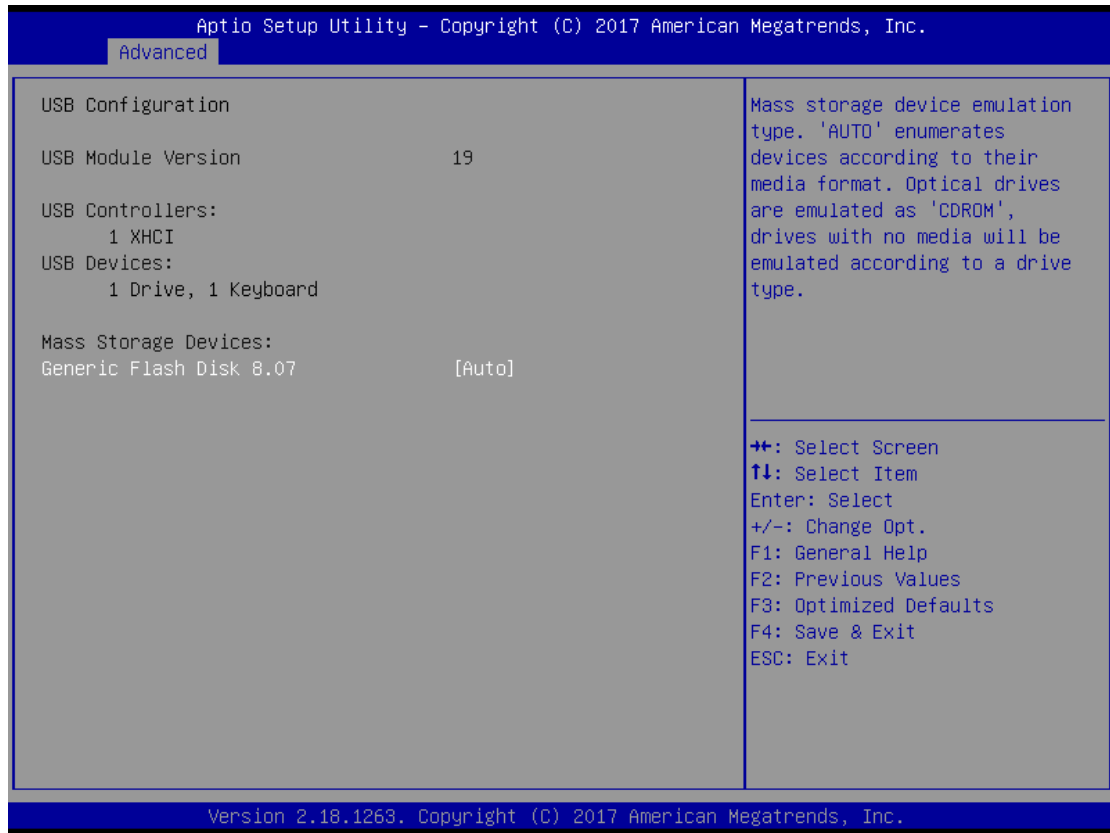

➤ **USB Devices**

Display all detected USB devices.


- **Module Configuration**

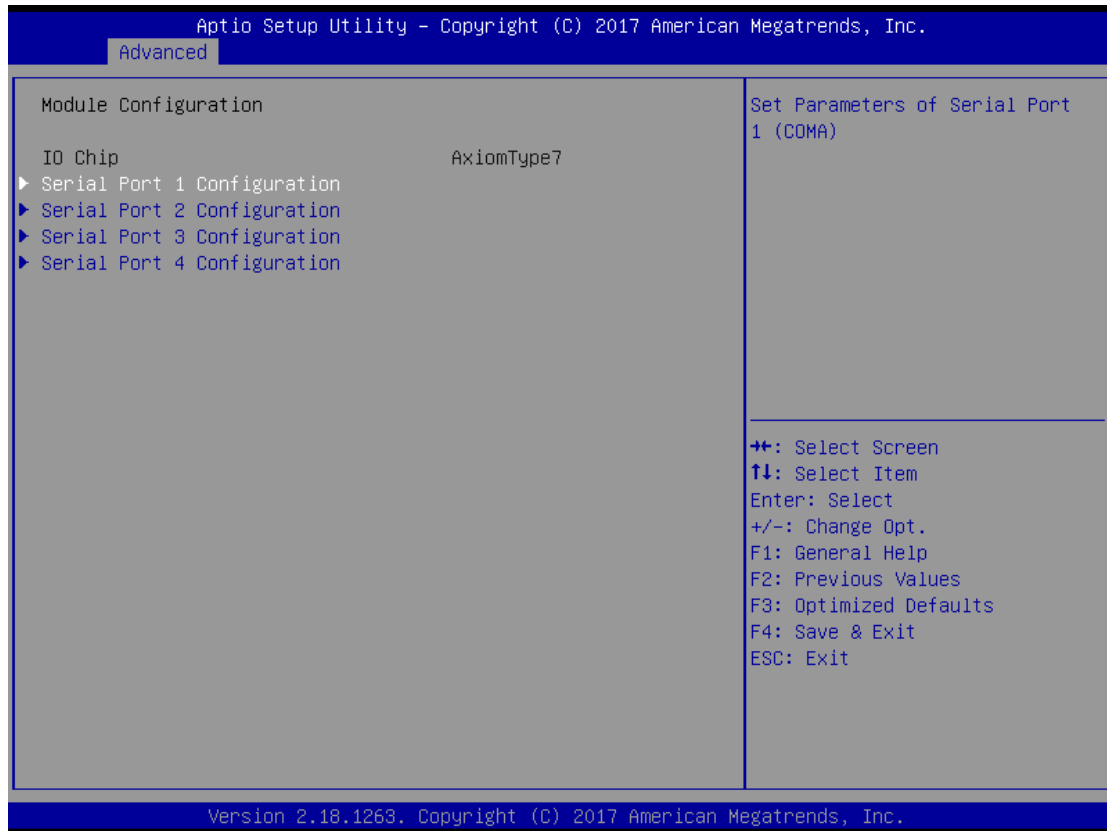

- **Serial Port 1~4 Configuration**

Use this item to set parameters of serial port 1 to 4.

- **Serial Port (1~4) Configuration**

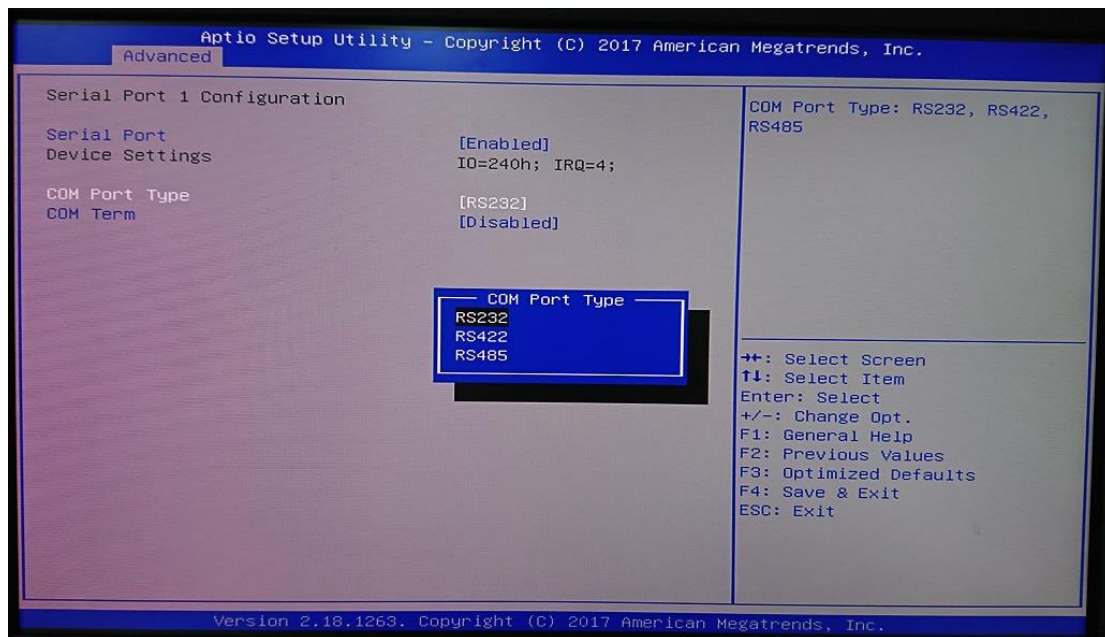

- **COM Port Type**


Use this item to set parameters of RS232/422/485.

3.5 Chipset Menu

The Chipset menu allows users to change the advanced chipset settings. You can select any of the items in the left frame of the screen to go to the sub menus:


► System Agent (SA) Configuration

For items marked with “►”, please press <Enter> for more options.

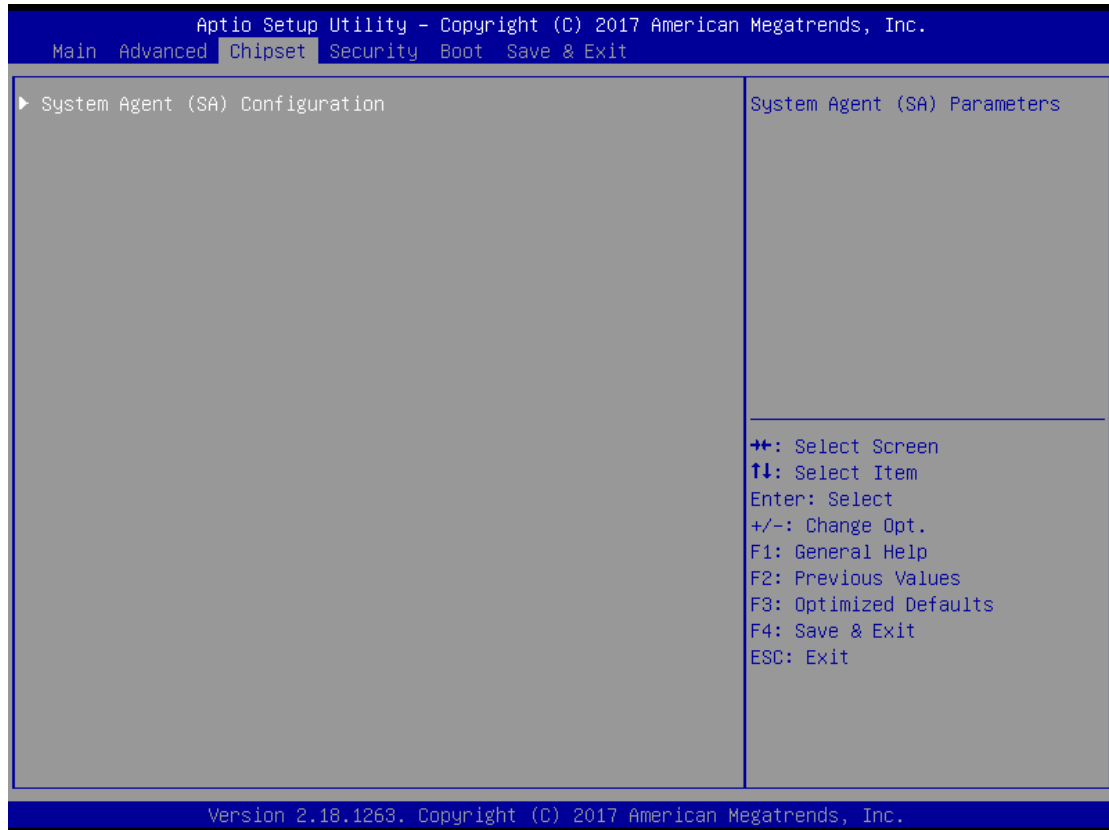

- **System Agent (SA) Configuration**

This screen shows System Agent information and provides functions for specifying related parameters. For items marked with “▶”, please press <Enter> for more options.

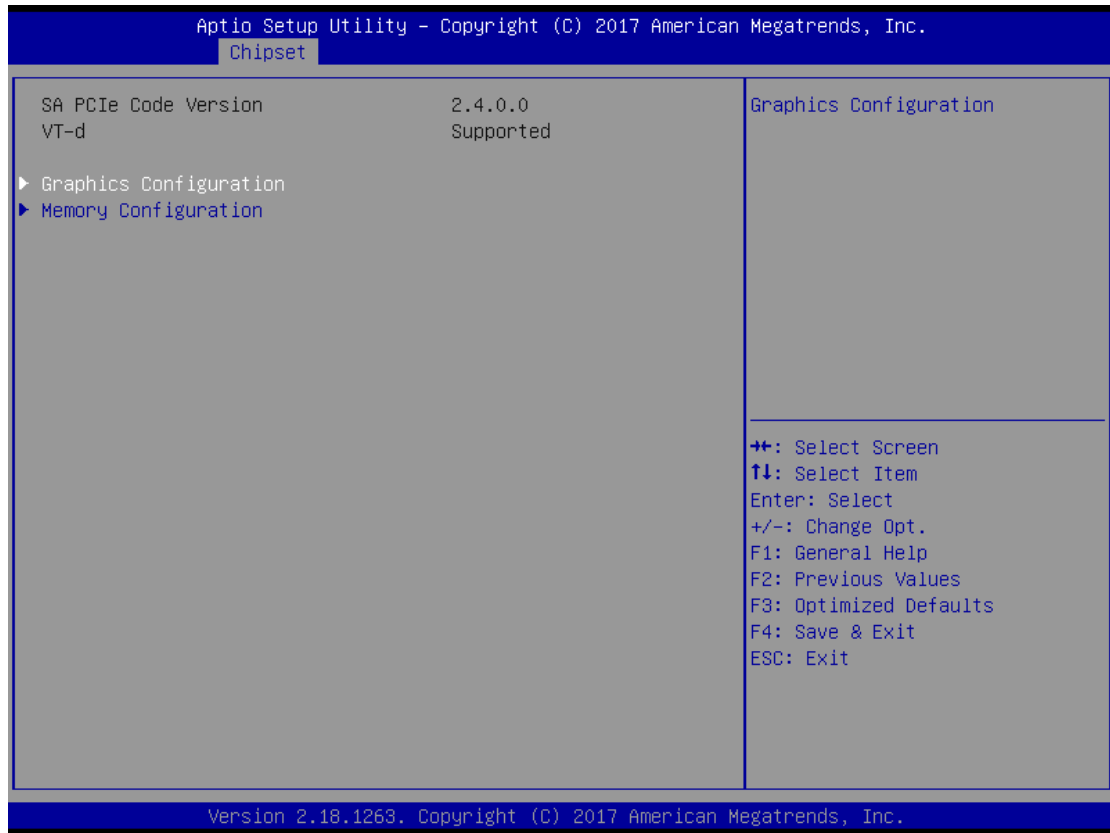


- **Graphics Configuration**

Use this item for graphics configuration settings.

- **Memory Configuration**

Use this item for memory configuration settings.

- **Graphic Configuration**

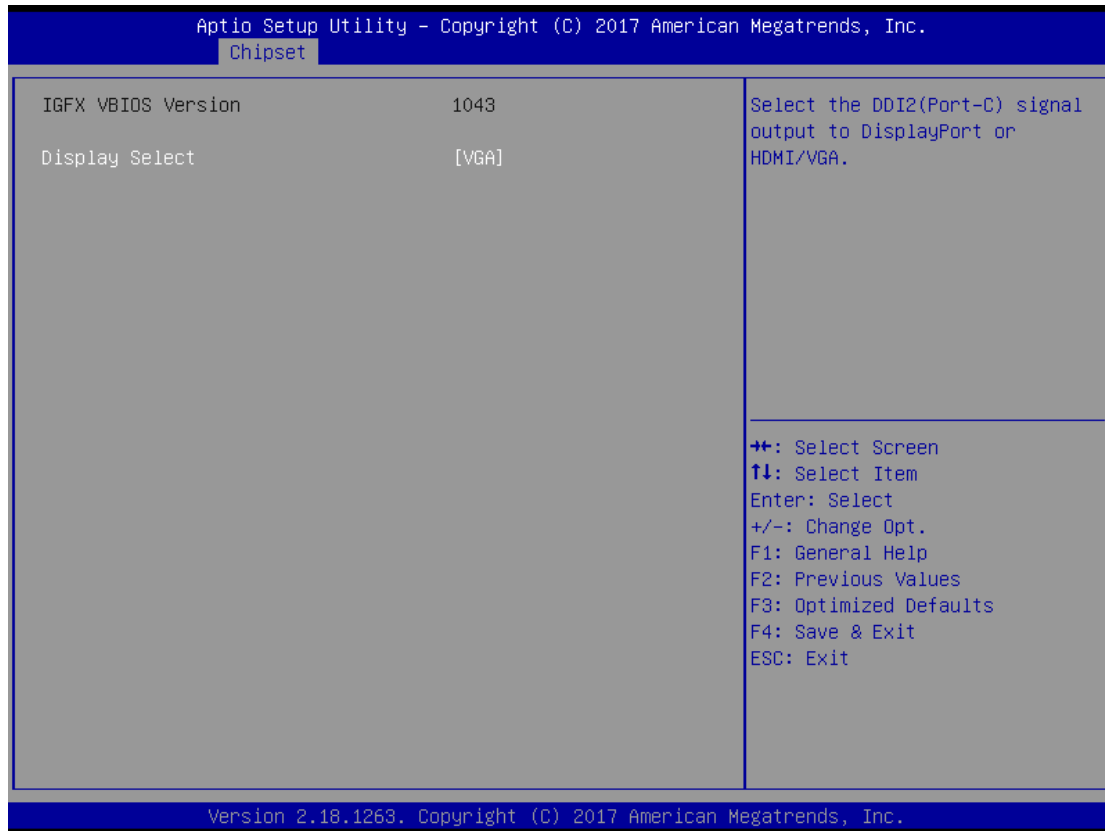

- **Display Select**

Allows you to select which graphics controller to use as the primary boot device.

● **Memory Configuration**

The screenshot displays the Aptio Setup Utility interface. At the top, a blue header bar contains the text "Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc." and a sub-menu "Chipset". The main area is a grey rectangle with a blue border. On the left side of this area, the following memory configuration details are listed:

Memory RC Version	2.4.0.0
Total Memory	8192 MB
Size	8192 MB (DDR4)


On the right side of the grey area, a list of navigation instructions is provided:

- ←→: Select Screen
- ↑↓: Select Item
- Enter: Select
- +/-: Change Opt.
- F1: General Help
- F2: Previous Values
- F3: Optimized Defaults
- F4: Save & Exit
- ESC: Exit

At the bottom of the interface, a blue footer bar contains the text "Version 2.18.1263. Copyright (C) 2017 American Megatrends, Inc."

3.6 Security Menu

The Security menu allows users to change the security settings for the system.

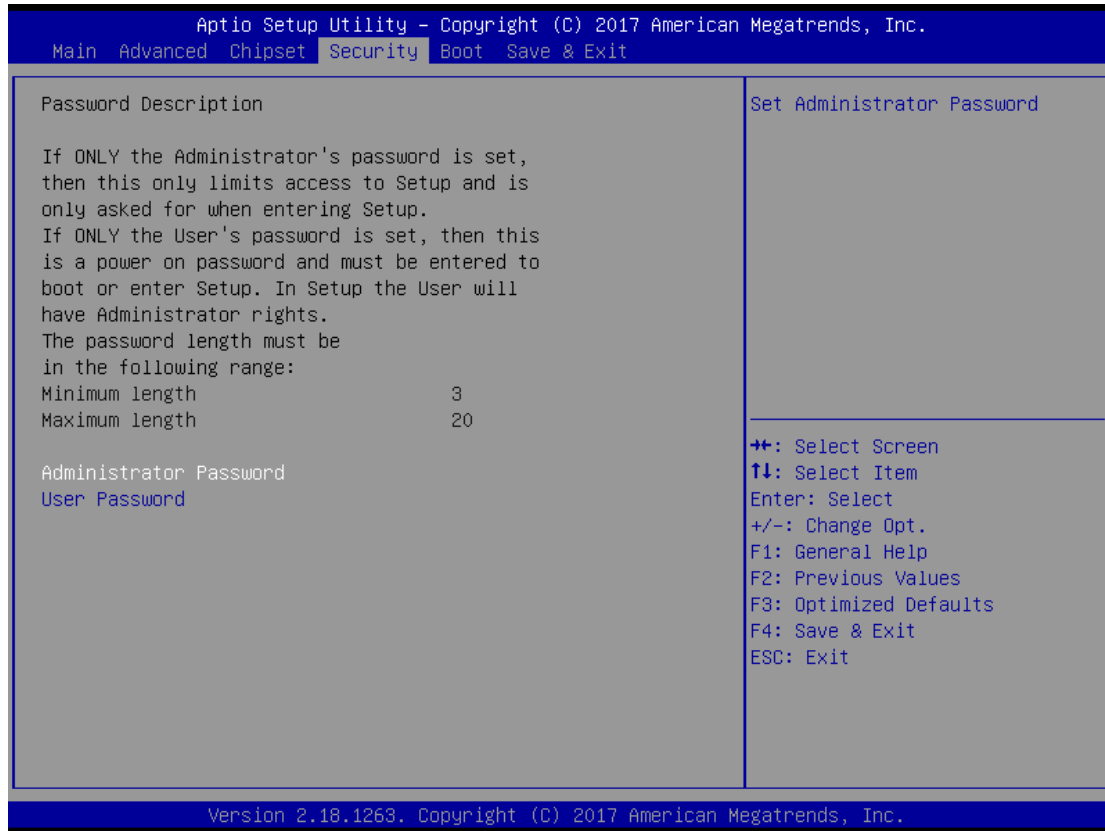

➤ **Administrator Password**


This item indicates whether an administrator password has been set (installed or uninstalled).

➤ **User Password**

This item indicates whether a user password has been set (installed or uninstalled).

3.7 Boot Menu


The Boot menu allows users to change boot options of the system.

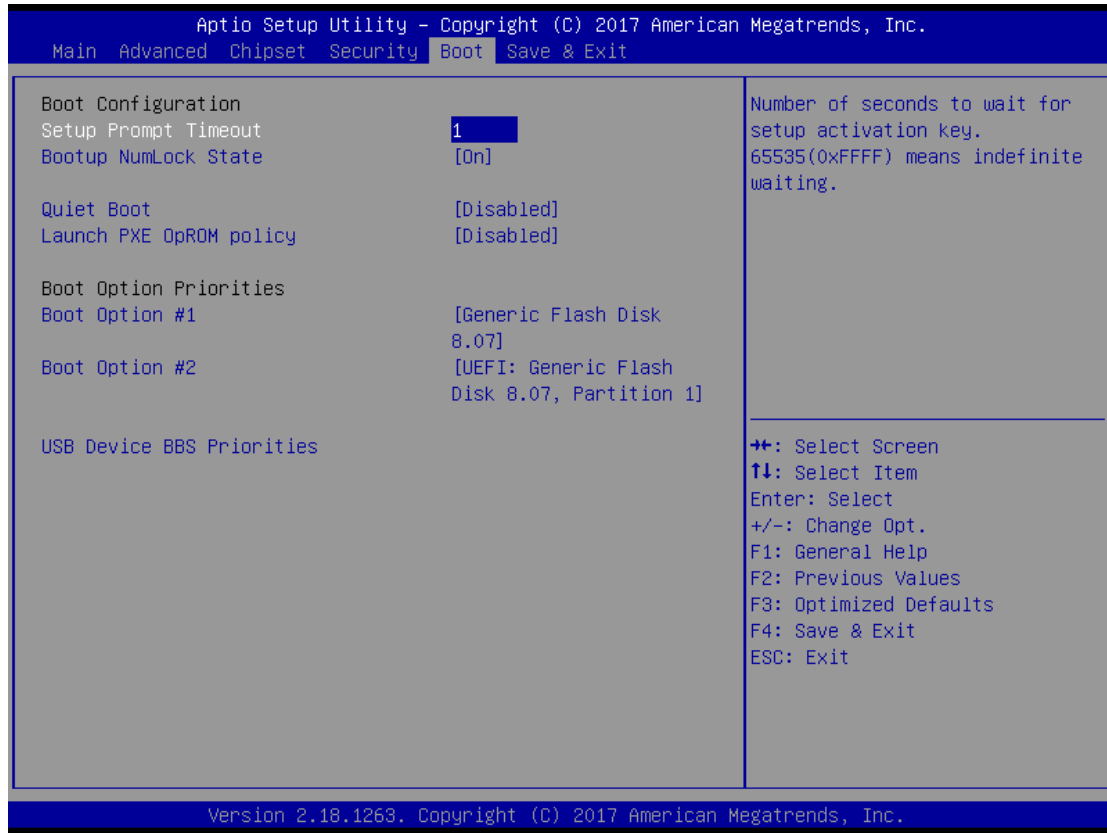

- **Setup Prompt Timeout**
Set the number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
- **Bootup NumLock State**
Use this item to select the power-on state for the keyboard NumLock.
- **Quiet Boot**
Select to display either POST output messages or a splash screen during boot-up.
- **Launch PXE OpROM policy**
Use this item to enable or disable the boot ROM function of the onboard LAN chip when the system boots up.
- **Boot Option Priorities**
These are settings for boot priority. Specify the boot device priority sequence from the available devices.

3.8 Save & Exit Menu

The Save & Exit menu allows users to load your system configuration with optimal or fail-safe default values.

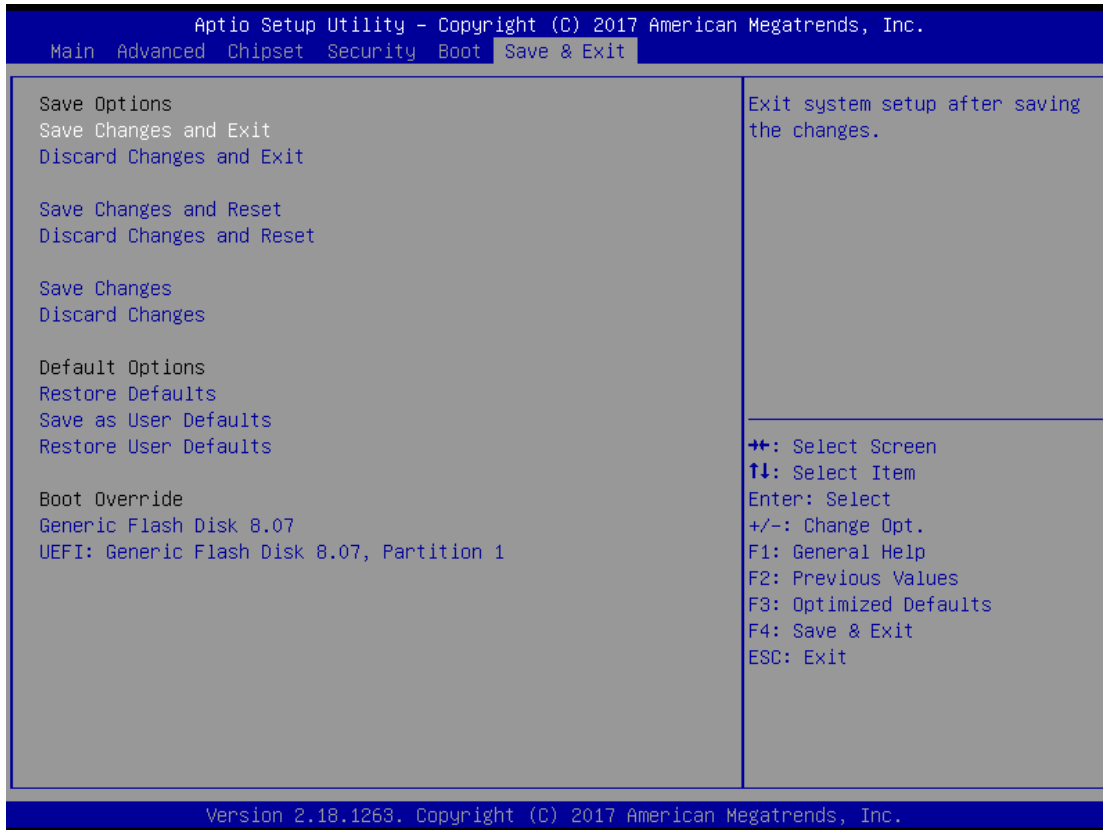

➤ Save Changes and Exit

When finish the system configuration settings, select this option to leave Setup and return to Main Menu. Select Save Changes and Exit from the Save & Exit menu and press <Enter>. Select Yes to save changes and exit.

➤ Discard Changes and Exit

Select this option to quit Setup without making any permanent changes to the system configuration and return to Main Menu. Select Discard Changes and Exit from the Save & Exit menu and press <Enter>. Select Yes to discard changes and exit.

➤ Save Changes and Reset

When finishing the system configuration settings, select this option to leave Setup and reboot the computer so the new system configuration parameters can take effect. Select Save Changes and Reset from the Save & Exit menu and press <Enter>. Select Yes to save changes and reset.

➤ **Discard Changes and Reset**

Select this option to quit Setup without making any permanent changes to the system configuration and reboot the computer. Select Discard Changes and Reset from the Save & Exit menu and press <Enter>. Select Yes to discard changes and reset.

➤ **Save Changes**

When finishing the system configuration settings, select this option to save changes. Select Save Changes from the Save & Exit menu and press <Enter>. Select Yes to save changes.

➤ **Discard Changes**

Select this option to quit Setup without making any permanent changes to the system configuration. Select Discard Changes from the Save & Exit menu and press <Enter>. Select Yes to discard changes.

➤ **Restore Defaults**

When selecting this option, all the settings will be restored to defaults automatically. Select Restore Defaults from the Save & Exit menu and press <Enter>.

➤ **Save as User Defaults**

Select this option to save your current system configuration settings as User Defaults. Select Save as User Defaults from the Save & Exit menu and press <Enter>.

➤ **Restore User Defaults**

When selecting this option, all the settings will be restored to user defaults automatically. Select Restore User Defaults from the Save & Exit menu and press <Enter>.

➤ **Boot Override**

Select a drive to immediately boot that device regardless of the current boot order.

APPENDIX A WATCHDOG TIMER

A.1 About Watchdog Timer


Software stability is major issue in most application. Some embedded systems are not watched by operator for 24 hours. It is usually too slow to wait for someone to reboot when computer hangs. The systems need to be able to reset automatically when things go wrong. The watchdog timer gives us solution.

The watchdog timer is a counter that triggers a system reset when it counts down to zero from a preset value. The software starts counter with an initial value and must reset it periodically. If the counter ever reaches zero which means the software has crashed, the system will reboot.

A.2 How to Use Watchdog Timer

The I/O port base addresses of watchdog timer are 2E (hex) and 2F (hex). The 2E (hex) and 2F (hex) are address and data port respectively.

Assume that program A is put in a loop that must execute at least once every 10ms. Initialize watchdog timer with a value bigger than 10ms. If the software has no problems, watchdog timer will never expire because software will always restart the counter before it reaches zero.

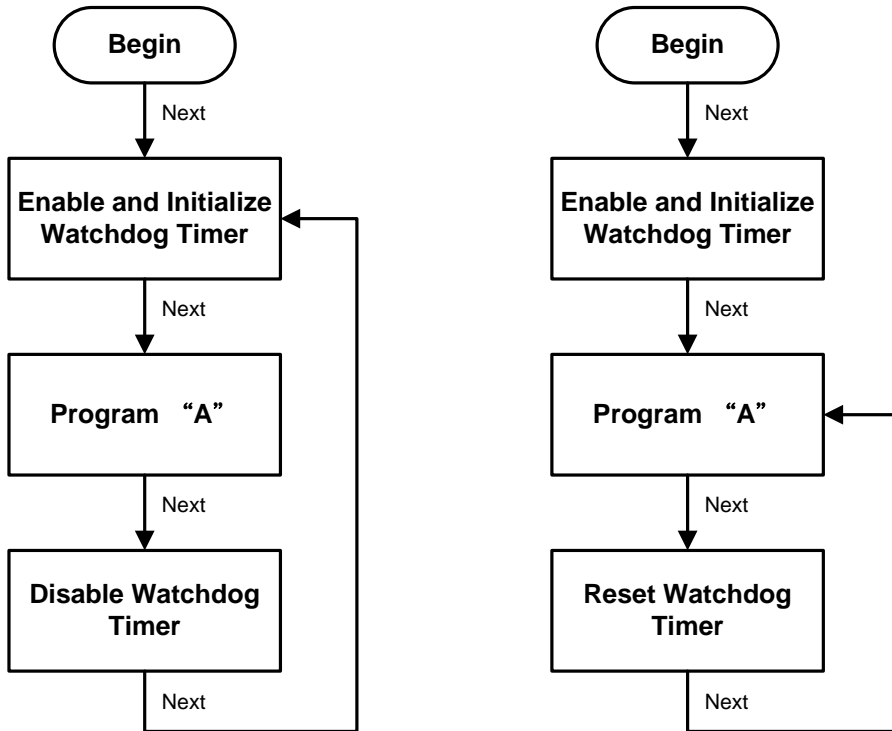

A.3 Sample Program

Assembly sample code :

```

;Enable WDT:
mov    dx,2Eh
mov    al,87          ;Un-lock super I/O
out    dx,al
out    dx,al
    
```

```

;Select Logic device:
mov    dx,2Eh
mov    al,07h
out    dx,al
mov    dx,2Fh
mov    al,07h
out    dx,al
    
```

```

;Enable WDT base address:
mov    dx,2Eh
mov    al,30h
    
```



```

out    dx,a1
mov    dx,2Fh
mov    a1,01h
out    dx,a1

```

;Activate WDT:


```

mov    dx,2Eh
mov    a1,0F0h
out    dx,a1
mov    dx,2Fh
mov    a1,80h
out    dx,a1

```

;Set base timer :


```

mov    dx,2Eh
mov    a1,0F6h
out    dx,a1
mov    dx,2Fh
mov    a1,Mh          ;M=00h,01h,...FFh (hex),value=0 to 255
out    dx,a1          ;(see  Note below)

```

;Set Second or Minute :

```

mov    dx,2Eh
mov    a1,0F5h
out    dx,a1
mov    dx,2Fh
mov    a1,Nh          ;N=71h or 79h(see  Note below)
out    dx,a1

```

 **Note:**

If **N=71h**, the time base is set to second.

M = time value

00: Time-out disable

01: Time-out occurs after 1 second

02: Time-out occurs after 2 seconds

03: Time-out occurs after 3 seconds

.

.

FFh: Time-out occurs after 255 seconds

If N=79h, the time base is set to minute.

M = time value

00: Time-out disable

01: Time-out occurs after 1 minute

02: Time-out occurs after 2 minutes

03: Time-out occurs after 3 minutes

.

.

FFh: Time-out occurs after 255 minutes